


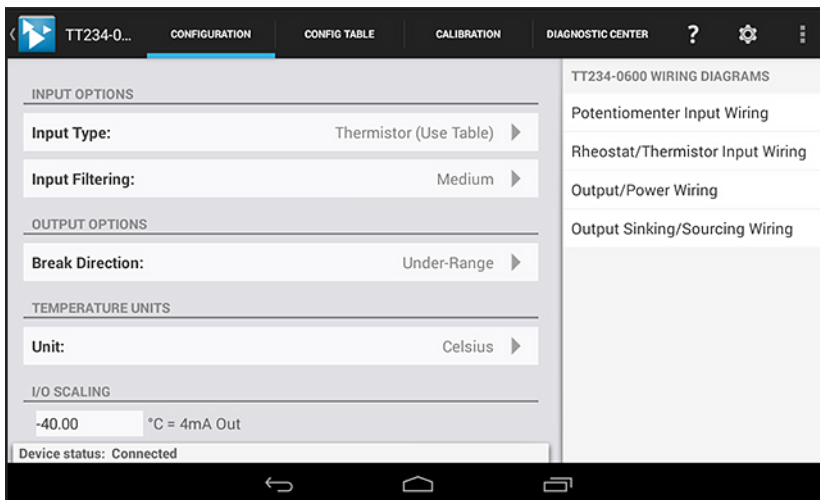 
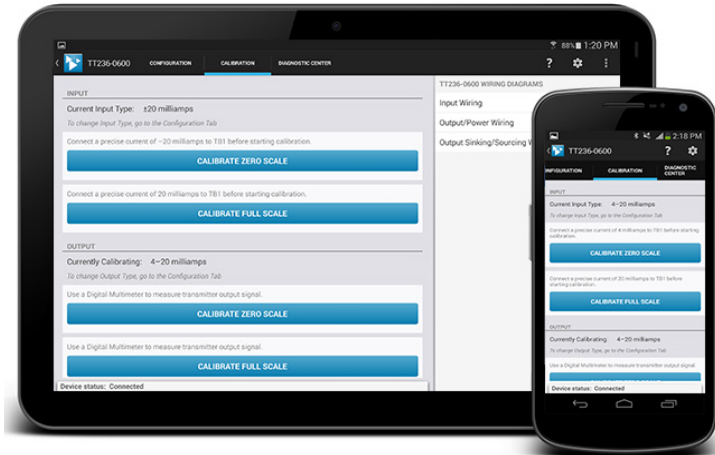 
Software Support: Agility Config

Acromag Agility™ Config Tool Mobile Application

 
The Agility™ Config Tool is a mobile application that allows easy setup and configuration of Acromag DT and TT Series transmitters and SP Series signal splitters via a tethered mobile device.

This free app is available for Android devices at the Google Play store at [Acromag Agility™ Config Tool](#).

Demo the software, no need for a module. To enter demo mode simply tap the  icon in the upper left corner 8 times.




With a couple of taps, quickly configure input, output, unit and scaling options.

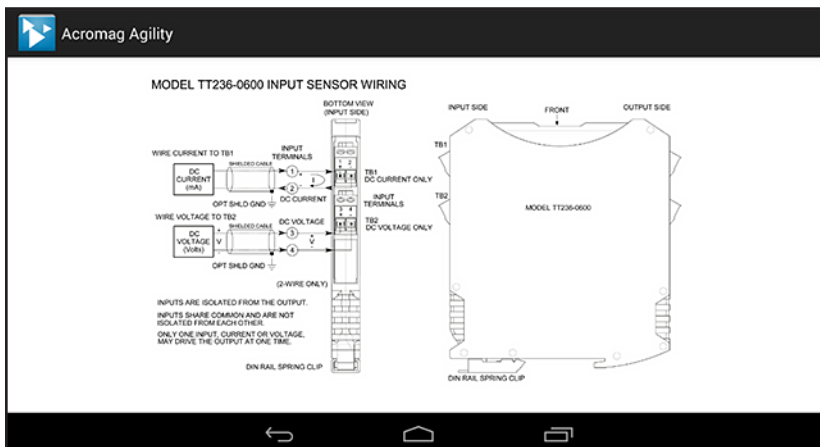

Quick and easy access to the wiring diagram, even offline without internet access.

Key Features & Benefits

 - Connects to Acromag DT and TT Series transmitters (except model TT231), and SP Series signal splitters.
- Requires the use of USB OTG Cable (Acromag part # 5028-565) and USB A to Mini B Cable (Acromag part # 4001-113)
- Configures and calibrates DT, TT, and SP Series products via phone or tablet running Android 4.3 ICS (Ice Cream Sandwich) or later.
- View wiring diagrams, even without an internet connection.
- Perform quick and easy field diagnostics and troubleshooting.
- Ideal for field technicians.

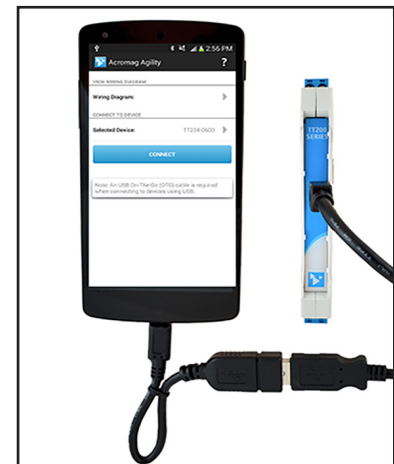

Acromag  [®]
THE LEADER IN INDUSTRIAL I/O

Tel 877-214-6267 ■ sales@acromag.com ■ www.acromag.com ■ 30765 Wixom Rd, Wixom, MI 48393 USA