

**USB Programmable, DIN-Rail Mount,  
Thin Temperature Transmitter, Two-Wire**

**Model TT233-0600, Isolated T/C & mV Input**

**USER'S MANUAL**



**ACROMAG INCORPORATED**  
30765 South Wixom Road  
Wixom, MI 48393-2417 U.S.A.

**Tel: (248) 295-0880**  
**Fax: (248) 624-9234**  
**email: [sales@acromag.com](mailto:sales@acromag.com)**

---

## Table of Contents

---

### GETTING STARTED

<b>DESCRIPTION</b> .....	<b>5</b>
Key Features.....	5
Application .....	5
Mechanical Dimensions .....	6
DIN Rail Mounting & Removal.....	6
<b>ELECTRICAL CONNECTIONS</b> .....	<b>7</b>
.....	8
Sensor Input Connections .....	8
Output/Power Connections .....	9
Earth Ground Connections .....	12
USB Connections.....	13
<b>CONFIGURATION SOFTWARE</b> .....	<b>14</b>
Quick Overview .....	14
<b>OPERATION STEP-BY-STEP</b> .....	<b>16</b>
Connections.....	16
Configuration.....	18
Calibration.....	22
Input Calibration .....	23
Output Calibration .....	23
TRef Calibration.....	24
Restore Factory Calibration .....	24
Other Configuration Controls .....	24
<b>BLOCK DIAGRAM</b> .....	<b>26</b>
How It Works.....	26
<b>TROUBLESHOOTING</b> .....	<b>27</b>
Diagnostics Table .....	27

---

**Service & Repair Assistance .....29**

**ACCESSORIES ..... 30**

    Software Interface Package.....30

    USB Isolator.....30

    USB A-B Cable.....30

    USB A-mini B Cable .....30

    USB OTG Cable .....31

    End Stops.....31

**SPECIFICATIONS ..... 32**

    Model Number .....32

    Input .....32

    Output.....34

    USB Interface.....35

    Enclosure & Physical .....36

    Environmental .....36

    Agency Approvals .....38

    Reliability Prediction.....38

    Configuration Controls.....38

**REVISION HISTORY ..... 39**

All trademarks are the property of their respective owners.

**IMPORTANT SAFETY CONSIDERATIONS**

You must consider the possible negative effects of power, wiring, component, sensor, or software failure in the design of any type of control or monitoring system. This is very important where property loss or human life is involved. It is important that you perform satisfactory overall system design and it is agreed between you and Acromag, that this is your responsibility.

*The information of this manual may change without notice. Acromag makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. Further, Acromag assumes no responsibility for any errors that may appear in this manual and makes no commitment to update, or keep current, the information contained in this manual. No part of this manual may be copied or reproduced in any form without the prior written consent of Acromag, Inc.*

*For additional information on these devices and related topics, please visit our web site at [www.acromag.com](http://www.acromag.com) and download our whitepaper 8500-904, Introduction to Two-Wire Transmitters. Also see 8500-926, Minimizing Error in Thermocouple Transmitter Connections.*

## GETTING STARTED

### DESCRIPTION

Symbols on equipment:



Means "Refer to User's Manual (this manual) for additional information".

The TT233-0600 is an ANSI/ISA Type II transmitter designed to interface with a thermocouple sensor (Type J, K, T, R, S, B, E, N), or millivoltage ( $\pm 100\text{mV}$ ) input source, isolate the input signal, and modulate a 4-20mA current signal to drive a two-wire current loop. This unit is setup and calibrated using configuration software and a USB connection to Windows-based PC's (Windows XP and later versions only). The unit provides an adjustable input range, degrees F or C selection, T/C linearization, input isolation, break detection, variable input filter, and cold-junction compensation.

### Key Features

- **Digitally setup and calibrated w/ Windows software via USB.**
- **Thin 12.5mm wide enclosure for high-density DIN-rail mounting.**
- **High measurement accuracy and linearity.**
- **T/C Type J, K, T, R, S, B, E, N, or  $\pm 100\text{mV}$  input support.**
- **T/C inputs are linearized with respect to temperature.**
- **T/C inputs include accurate Cold Junction Compensation.**
- **Supports both Celsius and Fahrenheit temperature units.**
- **Adjustable input ranges.**
- **Extra output connections support Sink or Source output wiring.**
- **Variable Input Filter Adjustment.**
- **Normal or Reverse Acting output.**
- **Up-scale or down-scale lead-break/burnout detection.**
- **Convenient non-polarized two-wire current loop powered.**
- **Namur compliant loop current.**
- **Wide ambient temperature operation.**
- **Hardened For Harsh Environments.**
- **CE Approved.**
- **UL/cUL Class 1, Division 2 Approved.**
- **Model TT233-0600 is ATEX Certified for Explosive Atmospheres.**

 II 3 G Ex nA IIC T4 Gc  $-40^{\circ}\text{C} \leq \text{Ta} \leq +80^{\circ}\text{C}$   
DEMKO 15 ATEX 1561X

### Application

This transmitter is designed for high-density mounting on 35mm T-type DIN rails.


This model isolates its input signal and can mate with grounded or non-grounded thermocouples. It provides an output current linearized to the T/C sensor temperature. Optionally, it supports a  $\pm 100\text{mV}$  input range and will drive an output current linear to the sensor millivoltage.

The output signal is transmitted via a two-wire, 4-20mA current loop. Two-wire current signals can be transmitted over long distances with high noise immunity. Sensor lead-break detection and the inherent 4mA live-zero output offers convenient I/O fault detection, should an input or output wire break. Extra connections at the output allow it to be optionally wired for a "sourced" 4-20mA output configuration (see Output/Power Connections).

## Mechanical Dimensions

Units may be mounted to 35mm "T" type DIN rail (35mm, type EN50022), and side-by-side on 0.5-inch centers.

**WARNING:** IEC Safety Standards may require that this device be mounted within an approved metal enclosure or sub-system, particularly for applications with exposure to voltages greater than or equal to 75VDC or 50VAC.

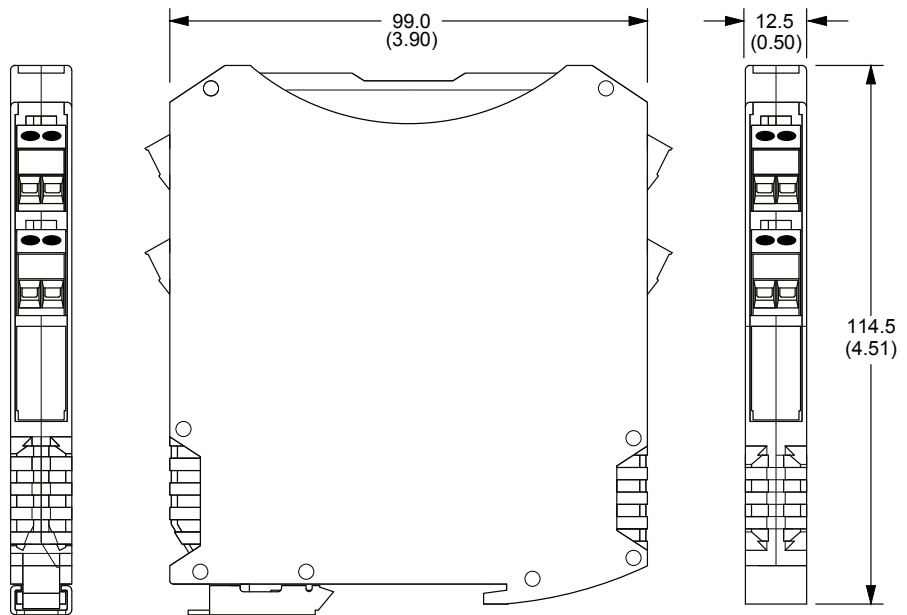


DIMENSIONS ARE IN MILLIMETERS (INCHES)

## DIN Rail Mounting & Removal

Refer to the following figure for attaching and removing a unit from the DIN rail. A spring loaded DIN clip is located on the input side bottom. The opposite rounded edge at the bottom of the output side allows you to tilt the unit upward to lift it from the rail while prying the spring clip back with a screwdriver. To attach the module to T-type DIN rail, angle the top of the unit towards the rail and place the top groove of the module over the upper lip of the DIN rail. Firmly push the unit downward towards the rail until it snaps into place. To remove it from the DIN rail, first separate the input terminal blocks from the bottom side of the module to create a clearance to the DIN mounting area. You can use a screwdriver to pry the pluggable terminals out of their sockets. Next, while holding the module in place from above, insert a screwdriver into the lower path of the bottom of the module to the DIN rail clip and use it as a lever to force the DIN rail spring clip down while pulling the bottom of the module outward until it disengages from the rail. Then simply lift it from the rail.

## TT2XX MODULE DIN RAIL MOUNTING AND REMOVAL

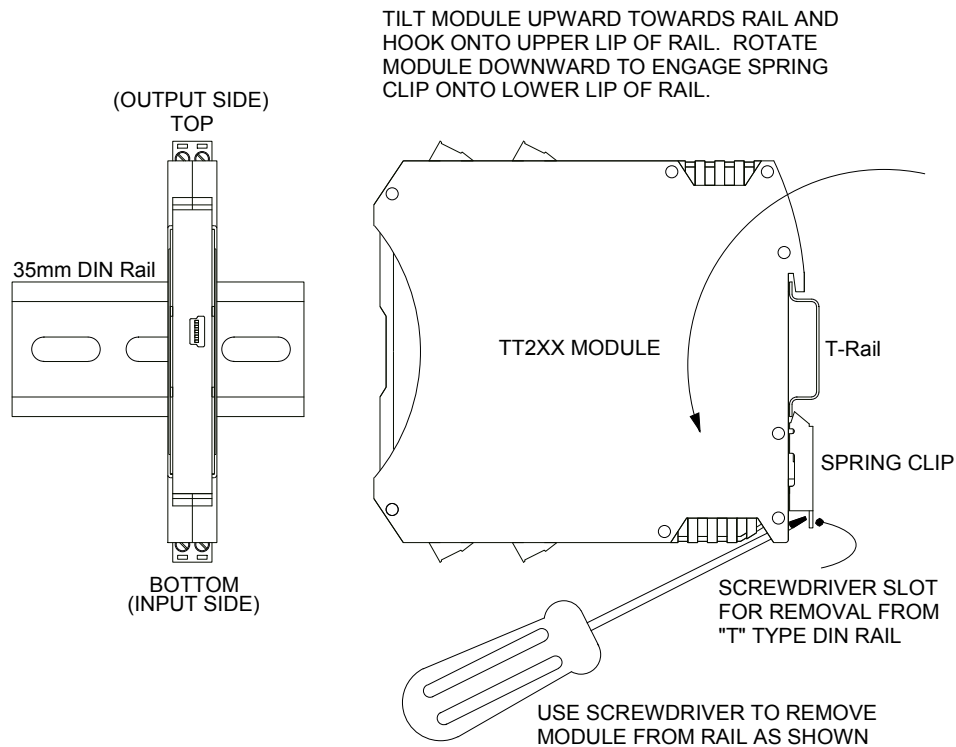

## ELECTRICAL CONNECTIONS



**WARNING** – EXPLOSION HAZARD – Do not disconnect equipment unless power has been removed or the area is known to be non-hazardous.

**WARNING** – EXPLOSION HAZARD – Substitution of any components may impair suitability for Class I, Division 2.

**WARNING** – EXPLOSION HAZARD – The area must be known to be non-hazardous before servicing/replacing the unit and before installing.

Wire terminals can accommodate 14–26 AWG (2.08–0.13mm<sup>2</sup>) solid or stranded wire with a minimum temperature rating of 85°C. Input wiring may be shielded or unshielded type. Ideally, output wires should be twisted pair. Terminals are pluggable and can be removed from their sockets by prying outward from the top with a flat-head screwdriver blade.

Strip back wire insulation 0.25-inch on each lead and insert the wire ends into the cage clamp connector of the terminal block. Use a screwdriver to tighten the screw by turning it in a clockwise direction to secure the wire (0.5-0.6Nm torque). Since common mode voltages can exist on signal wiring, adequate wire insulation should be used and proper wiring practices

followed. As a rule, output wires are normally separated from input wiring for safety, as well as for low noise pickup.



**Important – End Stops:** For hazardous location installations (Class I, Division 2 or ATEX Zone 2) it must use two end stops (Acromag 1027-222) to secure the module(s) to the DIN rail (not shown).


## Sensor Input Connections

Sensor wires are wired directly to transmitter input terminals at the bottom of the module, or the left side (the spring-loaded DIN clip side), as shown in the connection drawing below. Observe proper polarity when making input connections.

- **Transmitter Input signal is isolated from the output/power signal.**
- **T/C inputs use input terminals “+” and “-”.** The positive input is on the left and labeled “+”, and the negative input is to its right. Observe proper polarity. See connection figure below.
- **Input Cable Shield Terminals “G” and “S”** – For best performance, you can connect an input cable shield and earth ground at terminal block TB2 just below the input terminals of TB1. The “G” terminal is for connecting earth ground. The “S” terminal is used for terminating an input cable shield or its drain wire. The use of shielded input cable terminated in this way will help to improve transient input protection and minimize noise in noisy environments. **DO NOT CONNECT TO THE SHIELD CONNECTIONS IF YOUR SHIELD IS ALREADY GROUNDED AT THE OTHER END.** Internally, the “S” terminal connects to one end of a 3300pF isolation capacitor whose other end connects to the G terminal for earth ground. The Earth ground connection here is fully isolated from the rest of the internal circuit. Input circuit common also shunts to this ground terminal via an isolation capacitor for improved transient protection.



MODEL TT233-0600 INPUT SENSOR WIRING

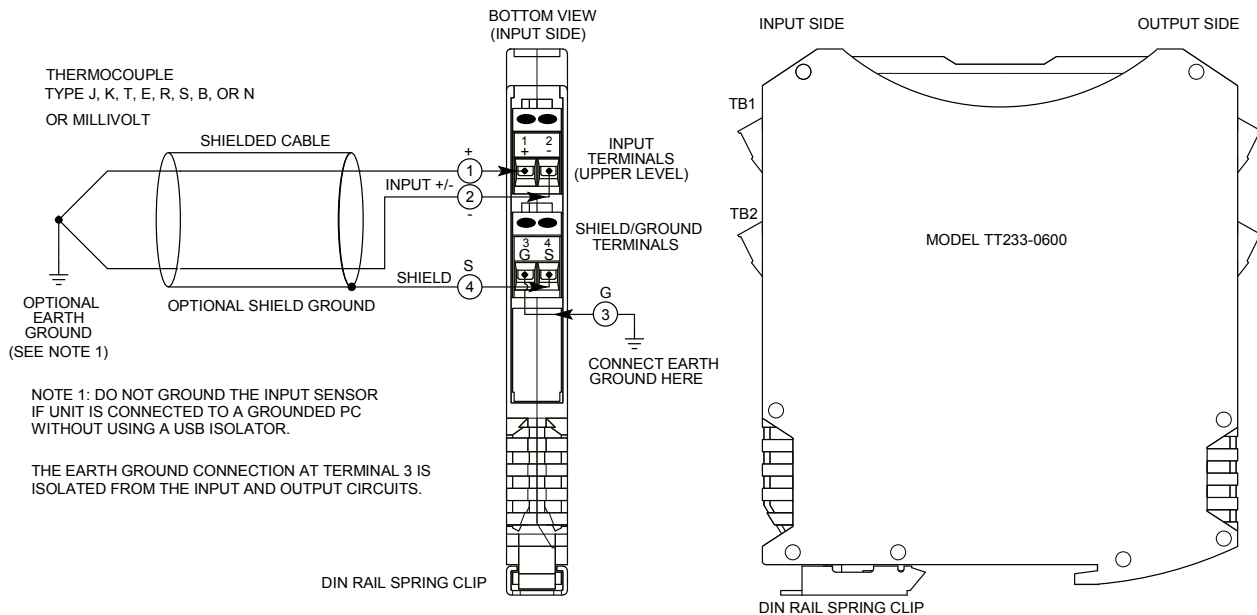


**Output/Power Connections**

This transmitter has an ANSI/ISA Type 2 output in which the unit's power and output signal share the same two leads, and the transmitter output has a floating connection with respect to earth ground. Connect a DC power supply and load in series in the two-wire loop as shown below.

- Output connections are not polarized. The output + and – designations are for reference only with current input to Output+ and returned via Output- (current sinking).
- Loop supply voltage should be from 12-32V DC with the minimum voltage level adjusted to supply over-range current to the load, plus 11V minimum across the transmitter, plus any transmission line drop.
- Variations in power supply voltage between the minimum required and 32V maximum, has negligible effect on transmitter accuracy.
- Variations in load resistance has negligible effect on output accuracy, as long as the loop supply voltage is set accordingly.
- Note the traditional placement of earth ground in the current loop. The transmitter output floats off this ground by the voltage drop in the load resistance and lead-wire.

**MODEL TT233-0600 OUTPUT/POWER WIRING**  
 TRADITIONAL LOOP-POWERED "SINKING OUTPUT" CONNECTIONS

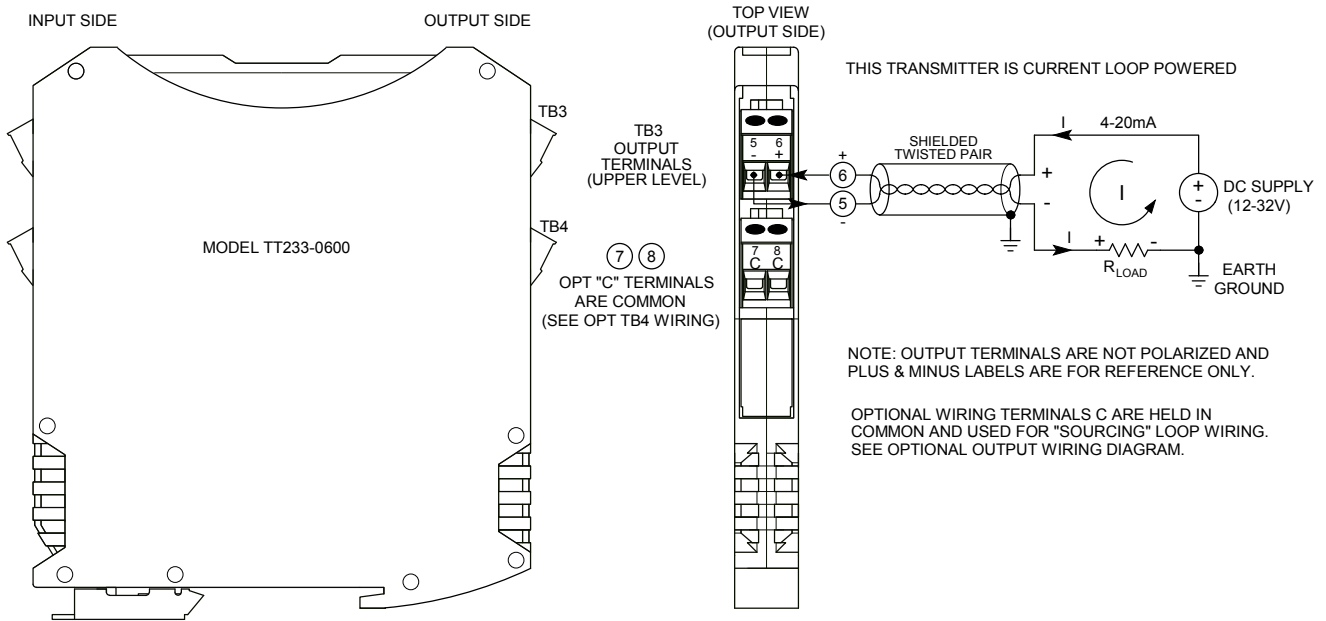


The traditional loop-powered "sinking" output connections are shown above. Shielded twisted-pair wiring is often used at the output to connect the longest distance between the field transmitter and the remote receiver as shown. The output of this transmitter fluctuates relative to earth ground by the voltage drop in the load and connection wire. This makes it flexible in the way it connects to various "Receiver" devices.


**Output/Power Connections...**

In most installations, the loop power supply will be local to either the transmitter, or local to the remote receiver. Common receiver devices include the input channel of a Programmable Logic Controller (PLC), a Distributed Control System (DCS), or a panel meter. Some receivers already provide excitation for the transmitter loop and these are referred to as “sourcing inputs”. Other receivers that do not provide the excitation are referred to as “sinking” inputs, and these will require that a separate power supply connect within the loop. These types of receivers are depicted below:

MODEL TT233-0600 OUTPUT WIRING  
"SINKING OUTPUT" CONNECTIONS WITH POWER LOCAL TO THE RECEIVER

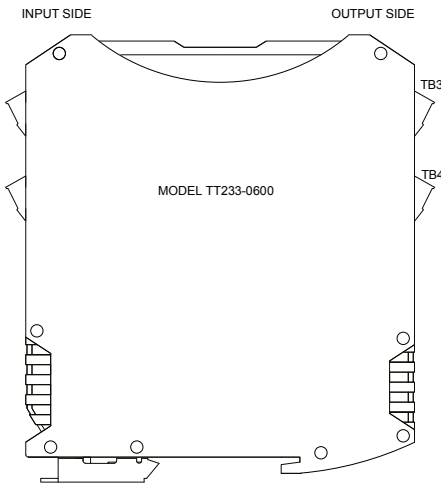

COMMON TWO-WIRE TRANSMITTER CONNECTION TO "SOURCING" AND "SINKING" INPUT RECEIVERS

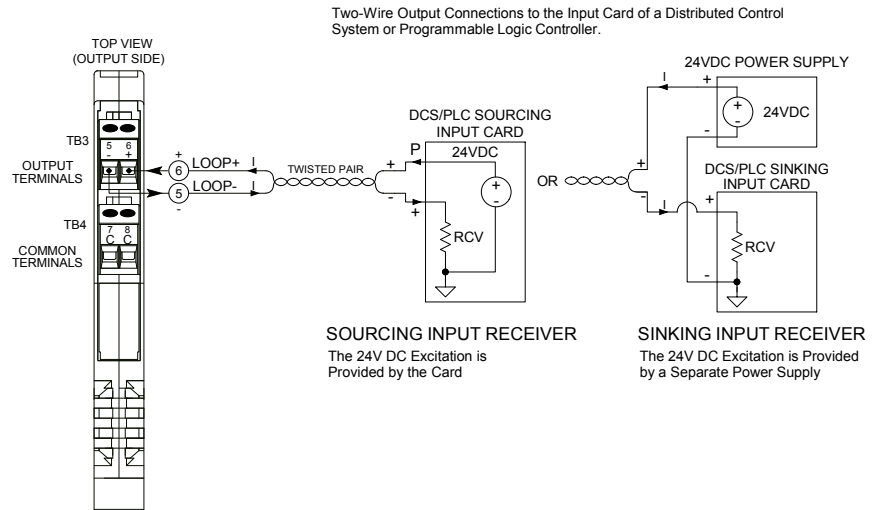


**WARNING:** For compliance to applicable safety and performance standards, the use of twisted pair output wiring is recommended. Failure to adhere to sound wiring and grounding practices as instructed may compromise safety, performance, and possibly damage the unit.

**TIP - Ripple & Noise:** Power supply ripple at 60Hz/120Hz is normally reduced at the load by the transmitter, but additional filtering at the load can reduce this ripple further. For large 60Hz supply ripple, connect an external 1uF or larger capacitor directly across the load to reduce excessive ripple. For sensitive applications with high-speed acquisition at the load, high frequency noise may be reduced significantly by placing a 0.1uF capacitor directly across the load, as close to the load as possible.

**TIP - Inductive Loads:** If the two-wire current loop includes a highly inductive load (such as an I/P current-to-pressure transducer), this may reduce output stability. In this case, place a 0.1uF capacitor directly across the inductive load and this will typically cure the problem.

## Output/Power Connections...

This model includes two extra terminal connections at TB4 marked “C” which provide a convenient wiring point for a “sourcing” wiring variation as shown below. Internally, these two terminals are connected in common with each other and do not connect to the internal circuit. Use of these terminals in your wiring scheme allows you to connect external power local to the transmitter and form a “sourcing” entity from this “sinking” output as shown.

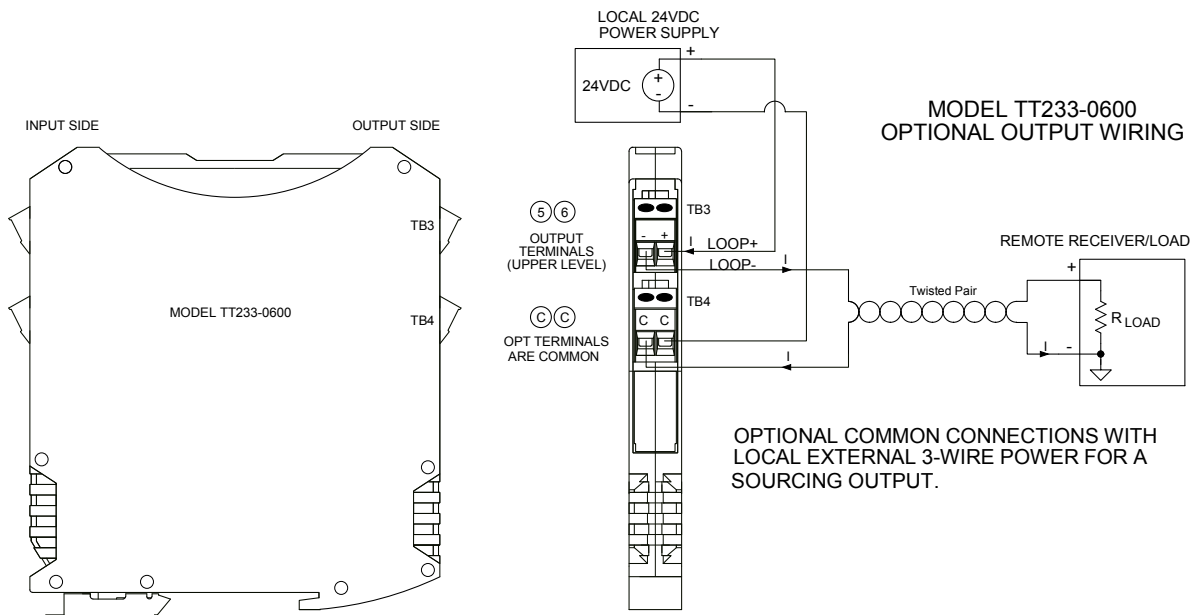

## Earth Ground Connections

This housing is plastic and does not require an earth ground connection, except where the optional input cable shield is terminated on the unit. The input cable shield connection is shunted to the earth ground applied at the “G” terminal via an internal isolation capacitor. This internal circuitry is electrically isolated from this earth ground connection, but capacitively coupled to it via an isolation capacitor for increased transient protection. If the transmitter is mounted in a metal housing, a ground wire connection is typically required and you should connect that metal housing’s ground terminal (green screw) to earth ground using suitable wire per applicable codes. See the Output/Power connections and note the traditional position of earth ground for the two-wire output current loop. Earth ground is normally applied at the output loop power minus terminal and in common with the loop load or loop receiver minus. The Type II transmitter output terminals have a floating connection relative to this earth ground.


- Respect the traditional earth ground of a two-wire current loop and avoid other inadvertent connections to earth ground (except input shield ground), which drive ground loops and negatively affect operation.
- A USB isolator is recommended when configuring or calibrating a unit to avoid the ground loop that occurs if your input signal is also earth grounded (A PC commonly earth grounds its USB port and this makes contact with both the USB signal and shield ground which is held in common to the input circuit ground of this transmitter).

**USB Connections**

This transmitter is setup, configured, & calibrated via configuration software that runs on a Windows-based PC connected to the unit via USB (Windows XP or later required). Refer to the following drawing to connect your PC or laptop to the transmitter for the purpose of reconfiguration and calibration using this software.

**TT SERIES USB TRANSMITTER CONNECTIONS**

USED FOR CONFIGURATION AND CALIBRATION OF THE TRANSMITTER IN A SAFE OR ORDINARY LOCATION

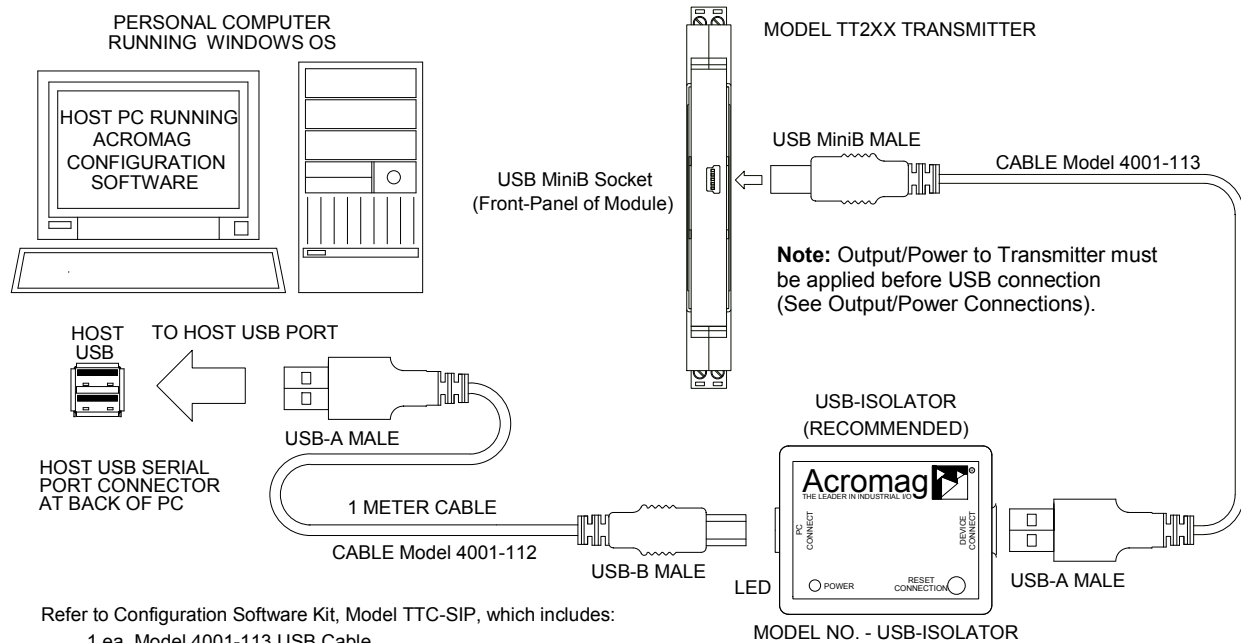

Refer to Configuration Software Kit, Model TTC-SIP, which includes:

- 1 ea, Model 4001-113 USB Cable
- 1 ea, Model 4001-112 USB Cable
- 1 ea, Model USB-ISOLATOR
- 1 ea, Model TT-CONFIG CDROM Software



**WARNING:** The intent of mating USB with this transmitter is so that it can be conveniently setup and calibrated in a safe area, then installed in the field which may be in a hazardous area. Do not attempt to connect a PC or laptop to this unit while installed in a hazardous area, as USB energy levels could ignite explosive gases or particles in the air.

- **USB Signal Isolation is Recommended and Required when connected to a grounded input** – Input and USB connections are isolated from the output of this model. USB Isolation is recommended for safety and noise suppression reasons, but required when the input signal happens to be grounded (i.e. when non-insulated or grounded probes are used). You may use Acromag model USB-ISOLATOR to isolate your USB port, or another USB isolator that supports USB Full Speed operation (12Mbps).
- **Recalibration Requires USB and Loop Power** – Power is drawn from both the current loop, and USB during calibration. Otherwise, USB power alone is sufficient to change setup parameters.

**IMPORTANT:** USB logic signals to the transmitter are referenced to the potential of the input ground. This ground is held in common with USB ground and USB shield ground. Thus, an isolator is required when the input signal is grounded and the unit is connected to the USB port of an earth-grounded PC. You could avoid the use of an isolator if a battery powered laptop PC was used to connect to the transmitter, and the laptop has no other earth ground connection, either directly or indirectly via connected peripheral devices.


## CONFIGURATION SOFTWARE

### Quick Overview

This transmitter can only be configured and calibrated via its Configuration Software and a USB connection to your PC or laptop. The configuration software can be downloaded free of charge from our web site at [www.acromag.com](http://www.acromag.com). This software is also included on a CDROM bundled with the Configuration Kit TTC-SIP (see Accessories section). For this model, look for program TT233Config.exe. The software is compatible with XP or later versions of the Windows operating system.

The configuration software screen for this model is shown at left. The configuration screen is divided into five sections as follows: USB Interface, Configuration, Test, Calibration, and the Message Bar and controls at the bottom of the screen. Additionally, there is a Reset button, a button to restore the unit to the factory default state, and a button to exit the program. A short description of each of these groups follows. **For a detailed explanation, see Operation Step-By-Step in the Technical Reference section of this manual.**

**HELP** – You can press F1 for Help on a selected or highlighted field or control. You can also click the [?] button in the upper-right hand corner of the screen and then click to point to a field or control to get a Help message pertaining to the item you pointed to.

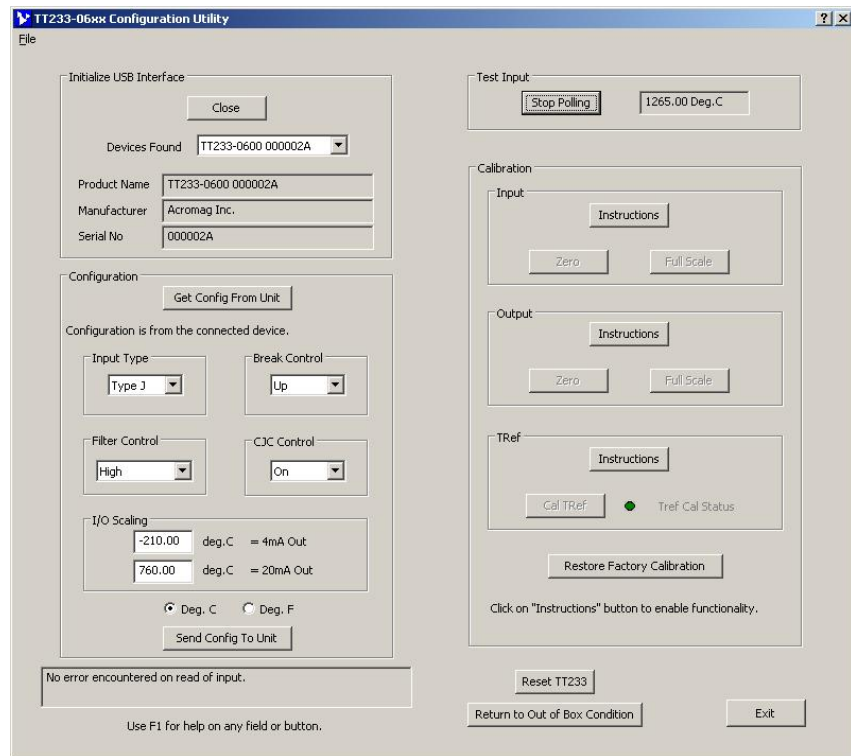

#### Initialize USB Interface (First Connect to Unit Here)

- Scans for connected transmitters and allows you to selectively open communications with them. The software automatically scans for connected transmitters when it is booted.
- **Devices Found:** You can select a connected transmitter and open communications with it from the Device Found pull-down menu. Click to highlight a transmitter and click “Open” to open communications with it.
- **Open/Close Button:** Click this button to open or close communication with the selected transmitter listed in the Devices Found field.
- Displays the model number (Product Name/serial), Manufacturer, and Serial Number of the connected/selected transmitter.

Device connection status messages are also indicated in the System Message Window at the bottom of the screen.

#### Configuration Area (Next Configure the Unit Here)

- Optionally retrieve the current configuration of the connected unit with “**Get Config From Unit**” button.
- **Input Type:** Set the Input Type, J, K, T, E, R, S, B, N, or  $\pm 100\text{mV}$ .
- **Break Control:** Set the break detection direction (Up or Down).
- **Filter Control:** Set the level of filtering to be applied to the input signal, High, Medium, Low, or None.

## Quick Overview...

You can click on “File” in the upper left hand corner to open a previously saved file, save your own file, or print out your configuration.

You can refer to the Operation Step-By-Step section of the Technical Reference portion of this manual for a more detailed description of every control described here.

- **CJC Control:** Select if the CJC is used (On or Off).
- **I/O Scaling:** Select the input range endpoints to scale to the 4 to 20mA output range endpoints. You can swap signals for reverse-acting output.
- **Degrees C or Degrees F:** Set the native units to degrees Fahrenheit or Celsius.
- Click “**Send Config To Unit**” to write your configuration after making selections.

Use the controls of the Configuration section to select an input type, the break direction, filter level, CJC on/off, input range scaling, and degrees Celsius or Fahrenheit. Click “**Send Config To Unit**” to write your changes to the unit after making your selections.

### Test Input Area (Validate Your Operation Here)

- **Polling Toggle & Input Display Field:** This button will toggle polling of the input on/off and display the input level in the adjacent field.

Validate operation of your unit by reading its input signal here.

### Calibration Area (Only As Needed if Recalibration is Required) (See Operation Step-By-Step for Procedure)

- **Input:** This section calibrates the selected input range.
- **Output:** This section calibrates the 4 to 20mA output.
- **TRef:** This section calibrates the cold-junction temperature reference for cold junction compensation of the T/C.
- **Restore Factory Calibration Button:** This button will restore only the original factory calibration to the unit. Note that this will not reset any of the configuration settings.

This section is used to calibrate the input, output, and CJC temperature sensor of the unit, as needed. Your unit has already been factory calibrated. Instructions on how to calibrate the unit is detailed in the Operation Step-By-Step section of the Technical Reference portion of this manual.

### Message Bar (Bottom of Screen)

- Displays the Fault Status of your transmitter input signal.
- Displays prompt instructions during calibration.

The system message bar at the bottom of the screen will display & repeat prompt instructions as you step through calibration. It also displays diagnostic messages (see Operation Step-By-Step for specific messages).

### Other Options (In Case of Trouble)

- **Reset TT233:** This button will reset the TT233 unit.
- **Restore to Out of Box Condition:** This button will restore **ALL** configuration settings and calibration to their original factory settings.

You can click the “Restore Factory Settings” button if you ever miscalibrate or misconfigure a transmitter in such a way that its operation appears erratic.

**For detailed configuration and calibration procedures, see the Operation Step-By-Step section of the Technical Reference on page 14 of this manual.**

---

## TECHNICAL REFERENCE

### OPERATION STEP-BY-STEP

---

#### Connections

**IMPORTANT:** Do not connect the transmitter to your PC via USB without also booting the configuration software. Connection to USB is intended as a temporary connection for the purpose of setup and reconfiguration only. If you connect to USB but do not boot the configuration, the output DAC will hold its last programmed value as the unit's microcontroller awaits initialization via the host running configuration software.

This section of the manual will walk you through the Connection-Configuration-Validation process step-by-step. It also covers recalibration if needed. But before you attempt to configure/calibrate this transmitter, make the following connections:

**Note:** Your input source and output meter must be accurate beyond the unit specifications, or better than  $\pm 0.1\%$ . A good rule of thumb is that your equipment source accuracy should be four times better than the rated accuracy you are trying to achieve with this transmitter.

1. **Connect Input:** Refer to Sensor Input Connections of page 6 and connect a precision voltage source or thermocouple calibrator to the input as required and observe proper polarity. This must be adjustable over the range desired for zero and full-scale. For voltage input, use a voltage source with an output impedance of  $100\Omega$  or less.

In the absence of a thermocouple calibrator, a convenient method of configuring the TC input would be to use a precision mV source with the module's CJC set to OFF. Using this method allows the mV source to be wired directly to the input T/C terminals using copper wires. The module's cold junction compensation is turned off and the mV values applied to the input are the equivalent thermoelectric voltages that correspond to the minimum and maximum temperatures of your desired input range specific to each T/C type. Refer to the table of the following page for a list of thermocouple voltages at specific temperatures. After setting zero and full-scale in this manner, the CJC switch should be returned back to the ON position to enable cold junction compensation when actually connecting to the unit with thermocouple wire.

2. **Connect Output/Power:** Refer to Output/Power Connections of pages 7-9 and wire an output current loop to the transmitter as illustrated. You need to measure the output current accurately in order to calibrate the unit. You could connect a current meter in series in this loop to read the loop current directly (not recommended). Alternatively, you could simply connect a voltmeter across a series connected precision load resistor in the loop, then accurately read the output current as a function of the IR voltage drop produced in this resistor (recommended). Be sure to power the loop with a voltage that minimally must be greater than the 11V required by the transmitter, plus the IR drop of the wiring and terminals, plus the IR drop in the load. To compute the IR drop, use a current level that considers the over-scale current ( $\sim 24\text{mA}$ ).

Loop Power Supply Voltage: Make sure your voltage is at least 11V plus  $0.020 \times \text{load\_resistance}$ . Ideally, it should be great enough to drive the over-range alarm current of 24mA into your load (i.e.  $\geq 11\text{V} + 0.024 \times R_{\text{load}}$ , assuming line drop is negligible and the maximum possible over-range current).

Apply power to the transmitter output loop and always power the loop before connecting to USB. You cannot calibrate the unit without loop power applied.



**Connections...**

**3. Connect to PC via USB:** Refer to USB Connections of page 10 and connect the transmitter to the PC using the USB isolator and cables provided in Configuration Kit TTC-SIP. You may omit the isolator if you are using a battery powered laptop/PC to connect to the unit, or if your input source is not already grounded.

Now that you have wired the unit, applied power, and connected the unit to USB, you can execute the Configuration Software TT233Config.exe to begin reconfiguration of your unit (software is only compatible with XP or later versions of the Windows operating system).

**Thermocouple millivoltage Versus Temperature  
(Per National Institute of Standards and Technology (NIST/ITS-90) Thermocouple Tables)**


TEMP °C	Thermoelectric Voltage In millivolts (With Reference Junction at 0°C)							
	J	K	T	E	R	S	B	N
- 260		---	<b>-6.232</b>	---	---	---	---	---
- 250	---	---	-6.180	---	---	---	---	---
- 230	---	---	-6.007	---	---	---	---	<b>-4.226</b>
- 210	<b>-8.095</b>	---	-5.753	---	---	---	---	-4.083
- 200	-7.890	<b>-5.891</b>	-5.603	<b>-8.825</b>	---	---	---	-3.990
- 150	-6.500	-4.913	-4.648	-7.279	---	---	---	-3.336
- 100	-4.633	-3.554	-3.379	-5.237	---	---	---	-2.407
- 50	-2.431	-1.889	-1.819	-2.787	<b>-0.226</b>	<b>-0.236</b>	---	-1.269
0	0.000	0.000	0.000	0.000	0.000	0.000	---	0.000
+ 50	2.585	2.023	2.036	3.048	0.296	0.299	---	1.340
+ 100	5.269	4.096	4.279	6.319	0.647	0.646	---	2.774
+ 150	8.010	6.138	6.704	9.789	1.041	1.029	---	4.302
+ 200	10.779	8.138	9.288	13.421	1.469	1.441	---	5.913
+ 250	13.555	10.153	12.013	17.181	1.923	1.874	---	7.597
+ 260	14.110	10.561	12.574	17.945	2.017	1.962	<b>0.317</b>	7.941
+ 300	16.327	12.209	14.862	21.036	2.401	2.323	0.431	9.341
+ 350	19.090	14.293	17.819	24.964	2.896	2.786	0.596	11.136
+ 390	21.297	15.975	<b>20.255</b>	28.146	3.304	3.164	0.746	12.603
+ 400	21.848	16.397	<b>20.872</b>	28.946	3.408	3.259	0.787	12.974
+ 450	24.610	18.516	---	32.965	3.933	3.742	1.002	14.848
+ 500	27.393	20.644	---	37.005	4.471	4.233	1.242	16.748
+ 550	30.216	22.776	---	41.053	5.021	4.732	1.505	18.672
+ 600	33.102	24.905	---	45.093	5.583	5.239	1.792	20.613
+ 650	36.071	27.025	---	49.116	6.157	5.753	2.101	22.556
+ 700	<b>39.132</b>	29.129	---	53.112	6.743	6.275	2.431	24.527
+ 760	<b>42.919</b>	31.628	---	57.870	7.461	6.913	2.854	26.883
+ 800	---	33.275	---	61.017	7.950	7.345	3.154	28.455
+ 900	---	37.326	---	68.787	9.205	8.449	3.957	32.371
+ 950	---	39.314	---	<b>72.603</b>	9.850	9.014	4.387	34.319
+1000	---	41.276	---	<b>76.373</b>	10.506	9.587	4.834	36.256
+1200	---	48.828	---	---	13.228	11.951	6.786	<b>43.846</b>
+1300	---	<b>52.410</b>	---	---	14.629	13.159	7.848	<b>47.513</b>
+1372	---	<b>54.886</b>	---	---	15.645	14.033	8.642	---
+1400	---	---	---	---	16.040	14.373	8.956	---
+1600	---	---	---	---	18.849	16.777	11.263	---
+1700	---	---	---	---	<b>20.222</b>	<b>17.947</b>	<b>12.433</b>	---
+1750	---	---	---	---	20.877	18.503	13.014	---
+1768	---	---	---	---	<b>21.101</b>	<b>18.693</b>	13.223	---
+1800	---	---	---	---	---	---	13.591	---
+1820	---	---	---	---	---	---	<b>13.820</b>	---

**Note (Table):** Shaded cells refer to the calibration range end points used to calibrate the T/C type for this model. Bold column entries refer to the nominal T/C input range end points of this model.

## Configuration


Note that without a device already connected via USB, the System Status window at the bottom of the screen prompts you to “Connect a TT233 to a USB port”.

After executing the Acromag Configuration software for this model, a screen similar to the following will appear if you have not already connected to your transmitter via USB (note some fields are faded out under these conditions):

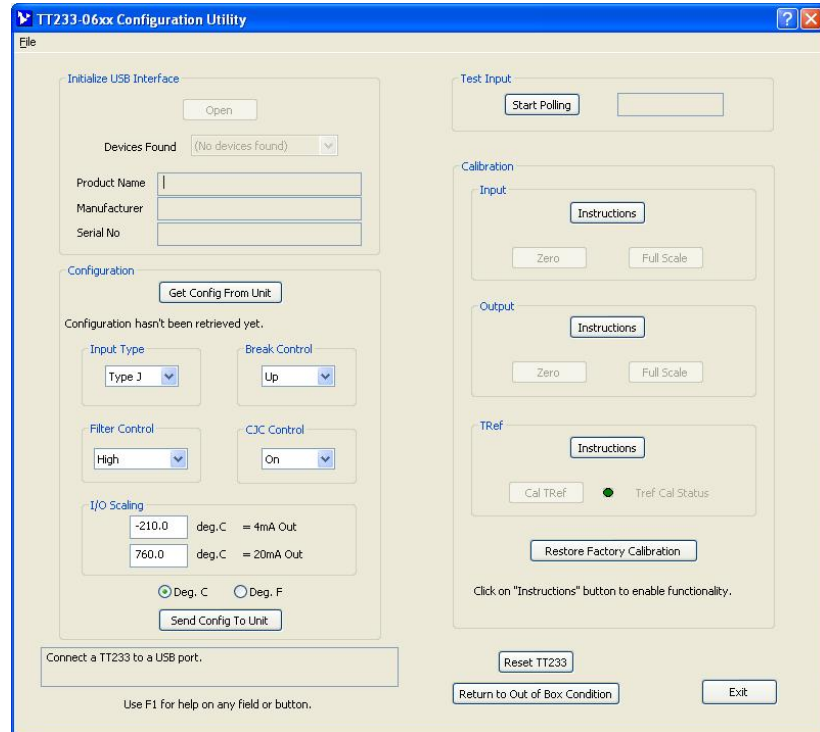

After you connect a transmitter to the USB port, the software will automatically detect it and the screen will change similar to the one at left. You can click the “Open” button to open a device for reconfiguration.


Note that with a device already connected via USB, the System Status window prompts you to “Select a device from the drop down box above and click Open”.

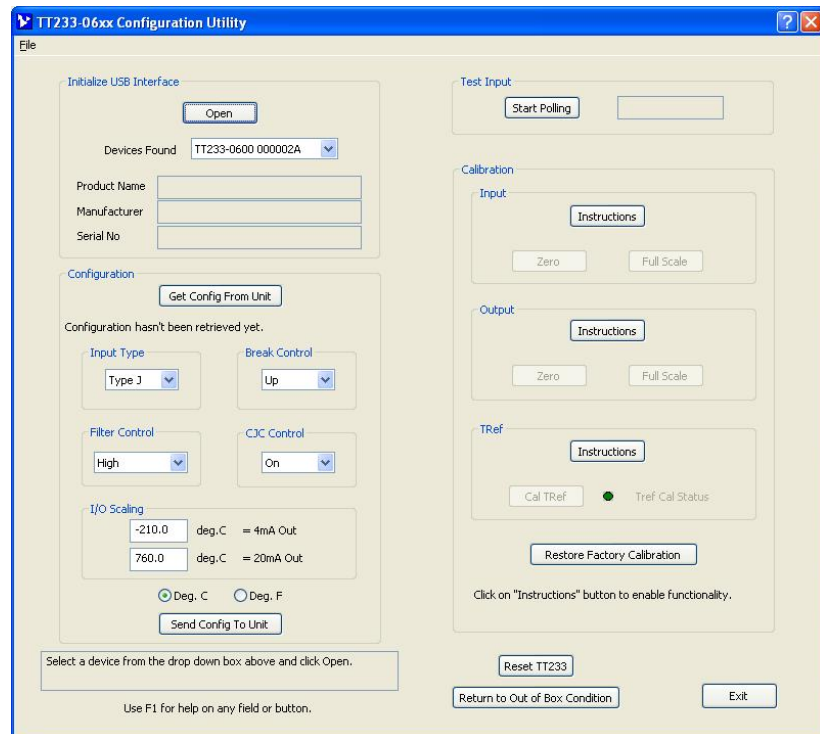

### Configuration...

**HELP** – You can press F1 for Help on a selected or highlighted field or control. You can also click the [?] button in the upper-right hand corner of the screen and click to point to a field or control to get a Help message pertaining to the item you pointed to.

At this point, you can select a device from the “Devices Found” field pull-down menu by clicking on it, then clicking the “Open” button to connect to the device for the purpose of configuration or test (use the serial number to discern a particular transmitter). The screen should then appear similar to the one shown below. Note that “No error encountered while reading configuration” is displayed in the System Message Window at the lower left corner of the screen. Additionally, the device Product Name field displays the Model, the Manufacturer field displays “Acromag, Inc.”, and the Serial field displays this model’s serial number. Additionally, most of the other fields and controls are not faded out and await your input.

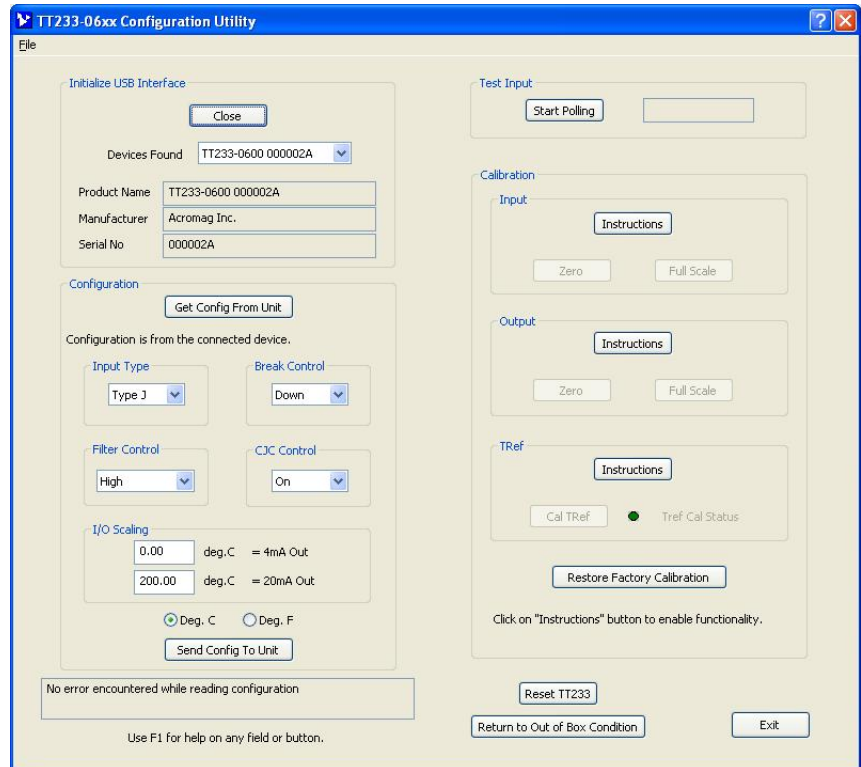

If more than one transmitter was connected via USB through a hub, you can discern which transmitter to open by referring to the product’s unique serial number appended to the Product Name. If your intent was to open a different transmitter on the hub, then you simply “Close” the current connection and use the Devices Found scroll bar to select another transmitter (discern by serial number), then click “Open” to open it for communication. If you break the USB connection to a transmitter, the software will display the following:



## **Configuration...**

**HELP** – You can press F1 for Help on a selected or highlighted field or control. You can also click the [?] button in the upper-right hand corner of the screen and click to point to a field or control to get a Help message pertaining to the item you pointed to.

After clicking “OK”, the software closes the connection and the screen returns back to its initial state, prior to connecting a module to USB. When you reconnect the USB cable, you will have to click “Open” to reopen communication with the transmitter. If you have more than one transmitter connected via a hub, then you will have to use the Device Name scroll bar to first select a transmitter (discern unit by serial number), and then click “Open” to open communication with it.

Note that if you intend to Test or Calibrate any elements of this transmitter, you should already have loop power connected to the transmitter before you execute this software.

At this point, the connected transmitter is ready for reconfiguration and the appropriate configuration fields become active and await your input.

*(Optional) To see the current configuration of a connected unit before making changes, click “Get Config From Unit” of the Configuration controls section. Note the message bar at the bottom of the screen and it should display a message like “No error encountered while reading configuration”*

### **Select the Input Type (T/C Type J, K, T, R, S, E, B, N, or $\pm 100\text{mVDC}$ )...**

- If you select any T/C type, your output will be linear with respect to sensor temperature, not sensor millivolts.
- If you select “100mV”, the output current will be linear with respect to input voltage, not temperature, and no special TC linearization will be performed. Note that “100mV” represents  $\pm 100\text{mV}$  range capability.

### **Select Upscale or Downscale Lead Break Detection...**

Upon sensor burnout or a broken sensor lead, you can select “Downscale” to send the output current to its down-scale limit ( $\sim 3.5\text{mA}$ ), or “Upscale” to send the output current to the over-scale limit ( $\sim 24\text{mA}$ ). You can usually discern a lead break or open sensor from an over-range or under-range input signal by noting its current level. Note that outputs can be reverse acting, but in this case, upscale remains  $\sim 24\text{mA}$ , and downscale still corresponds to a current level  $\sim 3.5\text{mA}$ .

### **Select a Filter Control Level (None, Low, Medium, or High)...**

In addition to the analog filters of this unit, it has the capability of applying digital filtering. You can select the amount of filtering as None, Low, Medium, or High. Increased filtering is useful to help minimize the negative effects of noisy input signals, but will increase the response time of the unit. Note the approximate response times indicated next to each filter level.

## Configuration...

**HELP** – You can press F1 for Help on a selected or highlighted field or control. You can also click the [?] button in the upper-right hand corner of the screen and click to point to a field or control to get a Help message pertaining to the item you pointed to.

### ***Turn Cold Junction Compensation (CJC) On, or Off...***

This model embeds a very accurate temperature sensor in the plastic around the input + and – terminals in order to cold-junction compensate the thermocouple signal wires. To explain, the voltage measured from the T/C reflects the difference in temperature between each end. Thus, in order to discern the actual temperature being sensed, it is necessary to know the temperature at the other end, and this is usually referred to as the Cold Junction.

Further, the connection between the thermocouple and the copper terminals of the cold junction introduces additional thermocouples into the circuit. However, because these errant thermocouples that occur at the junctions of the  $\pm$  terminals are close together and at identical temperatures, their effect on the principal measurement cancels out of the derivation. Still to keep error to a minimum, you should still avoid any environmental or installation effects that could drive a difference in temperature between the  $\pm$  input terminals. For example, touching one terminal and not the other, wiring different wire gages on each terminal, etc.

You normally turn CJC On via this control for making T/C measurements, but you can elect to turn it off temporarily, if you wish to calibrate the T/C input using a voltage source that connects to the module via copper wires (as opposed to the specific wire materials of various thermocouple types).

**Note:** *CJC temperature values are only resolved to 0.1°C using the internal lookup tables for the T/C type. As such, units configured for small input spans may appear less accurate with CJC ON, as  $\pm 0.1^\circ\text{C}$  becomes a greater percentage of a smaller span. Keep this in mind when resolving measurements with short spans and high gains.*

### ***Set the I/O Scaling (You can set this up to be Reverse Acting too)...***

This control is used to map your input range, or a portion of your input range, to the nominal 4mA (0%) and 20mA (100%) output range endpoints. Refer to the specifications to determine the full input range capability of the various input types. Then select valid input range endpoints to map to 4mA and to 20mA. Note that it is possible to exchange the order of these value assignments in order to define a reverse-acting output signal. You need to select the input temperature or millivoltage that is to correspond to 4mA of output signal and type this value into the corresponding field for 4mA output. You also need to do this for the 20mA output endpoint.

**Note:** The effective input resolution does not rescale itself for input spans smaller than the nominal input range. That is, input resolution diminishes proportionally as you reduce the input span by selecting smaller input ranges than nominal (see Specifications section for nominal ranges and resolution).

Note that some under-range and over-range is built-into the unit, as the output can swing as low as 3.5mA, and as high as 24mA. Actual endpoint limits will vary slightly between units.

## Configuration...

**HELP** – You can press F1 for Help on a selected or highlighted field or control. You can also click the [?] button in the upper-right hand corner of the screen and click to point to a field or control to get a Help message pertaining to the item you pointed to.

*If the input zero and full-scale points are chosen too close together (span too small), resolution is diminished and the performance will be degraded. A minimum effective span of 10mV is recommended to achieve rated performance. Pick your range values carefully, as you may have to precisely drive the corresponding input signal values for zero and full-scale in order to calibrate your input range later (if needed).*

### **(Optional) Test Your Input to Validate Your Configuration...**

The Test Input area of your screen is useful to view your continuously variable input measurement in the field adjacent to the Start/Stop Polling button. Simply click the “Start Polling” toggle button, and the input will be repeatedly polled and displayed in the adjacent field. Click this button again to turn polling off.

*Note that if CJC is ON, and your input signal is at 0°C (0.000mV), the temperature value displayed will be equivalent to the ambient temperature at the input terminals (i.e. your cold junction). You can get a feel for how stable your CJC temperature is by observing this value while shorting the input.*

**You should turn polling off while trying to calibrate the unit, or changing its configuration.**

## Calibration

### **Optional Calibration of Input, Output, and Tref...**

This section is used to optionally calibrate the input, output, and/or cold junction temperature reference of the unit. Your unit has already been factory calibrated and you should only attempt to recalibrate a unit if needed, and only if you have very accurate equipment to accomplish calibration. You can begin calibration of any of these three stages by clicking the corresponding “Instructions” button and following the on-screen prompts. Note that the button text will change according to the step.

Each calibration is a separate interactive process in which the software prompts you to apply input signals and then measure the corresponding output current. For example, it will first prompt you to apply the zero input signal, then measure and record the corresponding zero output signal current. Second, it does the same for the full-scale input signal and the corresponding full-scale output current signal. Note that as the input span is reduced, resolution also diminishes. The Configuration Software will usually let you know when you need to adjust your desired range limits as you enter them.

**CAUTION:** Input signal levels outside of the nominal input range of the unit will not be accepted for configuration of zero or full-scale. Since not all input levels can be validated during field programming, connecting or entering incorrect signals will produce an undesired output response.

## Input Calibration

Use this procedure to calibrate the selected input range.

1. Turn off CJC.
2. Select your Input Type and click the "Send Config" button.
3. Click on the Calibration-Input "Instructions" button.
4. Click on the "Zero" button.
5. Input the required voltage displayed in the pop-up box and click "OK".
6. Click on the "Full Scale" button.
7. Input the required voltage displayed in the pop-up box and click "OK".
8. Repeat steps 2-6 until all required input ranges have been calibrated. Note that some ranges are calibrated coincidentally. For example, Type K and Type N are calibrated by calibrating Type J. Type R and Type S are calibrated by calibrating Type T.

### Input Calibration Values For Supported Input Ranges

Available Input Ranges	INPUT CALIBRATION POINTS	
	LOW CALIBRATION POINT (Cal Lo)	HIGH CALIBRATION POINT (Cal Hi)
Type J TC	0.0° (0.000mV)	700.0° (39.130mV)
Type K TC	0.0° (0.000mV)	1300.0° (52.410mV)
Type N TC	0.0° (0.000mV)	1200.0° (43.846mV)
Type T TC	0.0° (0.000mV)	390.0° (20.255mV)
Type R TC	0.0° (0.000mV)	1700.0° (20.222mV)
Type S TC	0.0° (0.000mV)	1700.0° (17.947mV)
Type E TC	0.0° (0.000mV)	950.0° (72.603mV)
Type B TC	260° (0.317mV)	1700° (12.433mV)
±100 mVDC	-100.000 mVDC	100.000 mVDC

## Output Calibration

Use this procedure to calibrate the 4-20mA output range endpoints

1. Turn off CJC.
2. Select your Input Type and click the "Send Config" button.
3. Click on the Calibration-Output "Instructions" button.
4. Click on the "Zero" button.
5. Input the required voltage displayed in the pop-up box and click "OK".
6. Click on the "Full Scale" button.
7. Input the required voltage displayed in the pop-up box and click "OK".

## TRef Calibration

Use this procedure to calibrate the TRef Cold Junction Compensation.

1. First, calibrate the TC Type J input range as shown above.
2. Set the output to zero level (4mA).
3. Connect a TC Type J ice point reference to the device input terminals.
4. Click on the “Tref-Cal” button.
5. In the pop-up box, click “OK”.

## Restore Factory Calibration

If you make an error in recalibration, such that the unit has degraded performance, you can click the **“Restore Factory Calibration”** button to restore the unit to its original factory calibration. Doing so will not change or restore any configuration settings, only the supported range calibrations. You should only click the “Restore Factory Calibration” button if you miscalibrate or misconfigure a transmitter in such a way that its operation appears erratic.

## Other Configuration Controls

### Reset TT23x Button

You can use **“Reset TT23x”** to reset the transmitter and cause it to revert to its power-up conditions (e.g. equivalent to a power-on reset). This might be useful if you encounter erratic operation.

### Return to Out-of-Box Condition

You can use this button to restore the transmitter configuration to the original factory state (see Specifications Reference Test Conditions). This control provides a potential recovery path should the configuration ever become corrupted during recalibration, perhaps due to miscalibration. For example, if during calibration you break the USB connection before completing calibration, a memory transfer checksum value could be corrupted and this would inhibit normal operation. Alternately, this button can be used as a sanitation tool to restore the unit to its initial configuration. Note that the “Restore Factory Calibration” control of Calibration just affects the calibration of the unit, different from this control which sends the unit to its initial factory configuration and calibration. This button will restore **ALL** configuration settings and calibration to their original factory settings.




## OtherConfiguration Controls...

### Message Bar

The system message bar at the bottom of the screen will display & repeat prompt instructions as you step through calibration. It also displays diagnostic messages. For example:

"No devices found"  
"Connect a TT23x to a USB port."  
"Select a device from the drop down box above."  
"Unable to read from the device."  
"Interface Configured"  
"Sending configuration, this takes several seconds."  
"Error encountered while sending configuration."  
"No error encountered while sending configuration."  
"Getting configuration, this takes several seconds."  
"Error encountered while reading configuration."  
"No error encountered while reading configuration."  
"No error encountered on read of input."  
"Error encountered on read of input."  
"Calibrating input zero, this takes several seconds."  
"Error occurred during calibration, try again."  
"Calibration successful."  
"Calibration cancelled."  
"Calibrating input full scale, this takes several seconds."  
"Calibrating output zero, this takes several seconds."  
"Calibrating output full scale, this takes several seconds."  
"Restoring factory calibration."  
"Error occurred during calibration restore, try again."  
"Restore successful"  
"Restore cancelled"  
"Restoring to "Out-of-Box" condition."  
"Error occurred during restore, try again."  
"Out-of-Box restore successful."  
"Out-of-Box restore cancelled."  
"Resetting TT23x."  
"Reset complete."

## BLOCK DIAGRAM

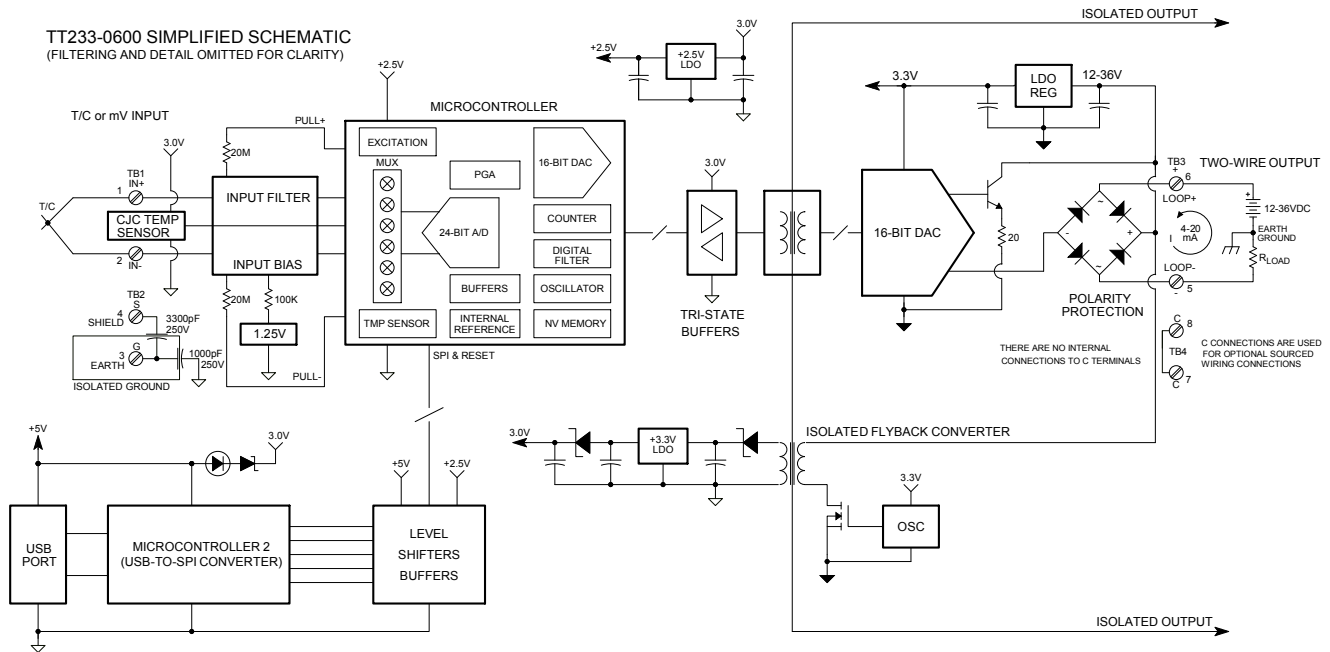

## How It Works

- Unit is Loop Powered
- Input is Isolated
- Input is Differential
- Output/Power Terminals are Not Polarized
- Input circuit ground is common to USB ground.
- USB powers a portion of the input when connected.
- Shield Earth Ground is isolated from circuit.

This transmitter uses a microcontroller with an embedded multiplexer and high-resolution A/D to convert the input signal to a serial digital pulse stream that is then isolated via a pulse transformer and transmitted to a current-loop DAC. Power for the isolated input side of the circuit is provided via an isolated flyback converter that operates in parallel with the output loop. Another microcontroller of the circuit is used to convert the external USB signals to an internal SPI bus signal during reconfiguration. Setup involves selecting the input type (T/C or mV), upscale or downscale break detection, turning CJC on or off as desired, selecting a filter level, and scaling the input range endpoints to 4mA and 20mA at the output. A cold junction compensation temperature sensor is located in the plastic that surrounds the input terminals. Output scaling can also be done in reverse to produce a reverse acting output signal. The maximum over-range output signal is approximately 24mA, the under-range signal is 3.3mA. Refer to the block diagram above to gain a better understanding of how this transmitter works.

The input/USB and output/power circuits are isolated from each other. The USB port ground is common to the input circuit ground. The USB port ground of most PC's is also common to the USB cable shield and earth ground. Input sensors could be grounded or ungrounded. For this reason, it is recommended that USB signals be isolated when connected to a PC to prevent a ground loop from occurring between the PC earth ground and a grounded input sensor, which would have the negative affect of pulling the input bias supply to ground.

## TROUBLESHOOTING

### Diagnostics Table

*Before attempting repair or replacement, be sure that all installation and configuration procedures have been followed and that the unit is wired properly. Verify that power is applied to the loop and that your loop power supply voltage is sufficient to supply over-scale current into the load (MIN 0.020\*Rload), plus 11V at the unit terminals, plus any line drop.*

*If your problem still exists after checking your wiring and reviewing this information, or if other evidence points to another problem with the unit, an effective and convenient fault diagnosis method is to exchange the questionable unit with a known good unit.*

*Acromag's Application Engineers can provide further technical assistance if required. Repair services are also available from Acromag.*

POSSIBLE CAUSE	POSSIBLE FIX
<i>Cannot Communicate with Transmitter via USB...</i>	
A missing USB Isolator could cause a ground loop between a grounded input sensor and earth ground at the connected Personal Computer's USB port.	Without USB isolation, a ground loop is created between a grounded input source and the earth ground of the PC USB port. For this reason and for increased safety and noise immunity, it's best to connect to USB via a USB isolator. Otherwise, use a battery powered laptop to configure the transmitter which does not normally earth ground its USB port.
<i>Cannot Calibrate The Output...</i>	
Loop power ON to the unit?	Unit requires a loop power connection, even when connected to USB if you are calibrating. The loop power supply should also be present <u>before</u> connecting to USB.
<i>Software Fails to Scan/Detect Transmitter...</i>	
Bad USB Connection	Recheck USB Cable Connection
USB has not enumerated the device.	Use the reset button on the Acromag USB isolator to trigger enumeration of the transmitter, or simply unplug/re-plug the USB cable to the transmitter.
Communication or power was interrupted while USB was connected and the configuration software was running.	Close the current connection with the software, re-scan the transmitter, then select and re-open the transmitter for communication (or simply exit the Configuration software and reboot it).
<i>Output Erratic, Not operational, or at Wrong Value...</i>	
Missing USB isolation with grounded input signal source.	Even though the input is isolated from the output, if your input sensor is grounded, then connecting USB to the transmitter will drive a ground loop between your input and earth ground at the PC (this drives the 1.25V input bias to connect to input ground). Use USB signal isolation, or alternatively, you can connect to a battery-powered laptop/PC, which does not earth ground its USB connection.
Otherwise...	Verify loop power and voltage level. Ideally, your supply voltage must be adequate to provide 11V to the transmitter, plus the IR drop in the load, plus the IR drop in the lead wires, and all at max loop current (24mA).

**Diagnostics Table...**

POSSIBLE CAUSE	POSSIBLE FIX
<i>For input step, output appears to make 2 steps to reach its final value...</i>	
For a step change in the input, the A/D needs 2 input samples to charge to its final level.	When you step the input signal, it takes two samples for the A/D to charge up to its final value, and this is evident when using a scope to examine the output transition in response to a step change at the input, which appears to make two steps to arrive at its final level.
<i>Output shifts off-range when you connect USB...</i>	
Indicative of a ground fault between earth ground at the PC and earth ground applied at the input sensor, which causes the 1.25V input bias to connect to input ground.	Only connect to the unit via isolated USB if your input sensor is grounded. You can connect without USB isolation if the input signal is not already grounded.
<i>Output goes to Over-Range (24mA) or Under-Range Limit (3.5mA)...</i>	
This indicates that either the input signal is out of range, or a sensor lead has broken and caused lead break detection to send the output to its upscale or downscale limit. It can also occur due to contention between earth ground at the PC USB port and the input sensor if a USB isolator is not used.	Check the input signal with respect to range and reduce or increase as required to drive the output current within its linear operating range. A fully upscale or down-scale signal is normally driven by a sensor fault, such as an open sensor or broken sensor lead, and this behavior follows the break control setting. Also check the wiring of your input sensor. If you are not isolating USB, check for a ground loop between a grounded T/C and earth ground of the PC USB port.
<i>Unit fails to operate or exhibits an output shift...</i>	
Is USB isolation not being used with a grounded sensor?	Isolated models are intended for use with ungrounded or grounded sensors, but you can only connect to grounded sensors if the USB signals are isolated. The input is normally biased 1.25V off input ground to allow negative signals, and a grounded probe could drive this bias to earth ground without an isolated USB connection.
<i>Unit drives a low current, but fails to drive current at/near/above 20mA...</i>	
Loop supply voltage is too low to support a full-scale or over-range current level through the loop load.	Check power voltage level. Make sure it is <u>at least</u> 11V plus 0.020*Rload. If the transmission distance is long, then it must have additional voltage to support the IR drop in the wire. Ideally, the voltage should be able to drive the load at the 24mA maximum upscale output current.
<i>Output holds last value when I connect USB...</i>	
Unit is awaiting initialization via its configuration software used to set it up and configure it.	Boot the configuration software to regain operation. The USB port is intended for setup and configuration of the module and it should not be left connected to USB without also booting the software.

**Diagnostics Table...**

POSSIBLE CAUSE	POSSIBLE FIX
<i>Cannot Calibrate Input Channel...</i>	
Is input wired properly?	Check that input is wired to +/- input terminals using correct polarity.
<i>Cannot Calibrate Tref...</i>	
Is unit failing Tref calibration with the software?	Make sure that unit is set for 4mA output. If you just calibrated the output, the unit is left at full-scale and you have to set it back to zero (4mA) before calibrating Tref.

**Service & Repair Assistance**

This unit contains solid-state components and requires no maintenance, except for periodic cleaning and transmitter configuration parameter (zero and full-scale) verification. The enclosure is not meant to be opened for access and can be damaged easily if snapped apart. Thus, it is highly recommended that a non-functioning transmitter be returned to Acromag for repair or replacement. Acromag has automated test equipment that thoroughly checks and calibrates the performance of each transmitter, and can restore firmware. Please refer to Acromag's Service Policy and Warranty Bulletins, or contact Acromag for complete details on how to obtain repair or replacement.

---

## ACCESSORIES

---

### Software Interface Package

#### Software Interface Package/Configuration Kit – Order TTC-SIP

- USB Signal Isolator
- USB A-B Cable 4001-112
- USB A-mini B Cable 4001-113
- Configuration Software CDROM 5040-944



This kit contains all the essential elements for configuring TT230 & TT330 family Transmitters. Isolation is recommended for USB port connections to these transmitters and will block a potential ground loop between your PC and a grounded current loop. A software CDROM is included that contains the Windows software used to program the transmitter.

### USB Isolator

#### USB Isolator – Order USB-ISOLATOR

- USB Signal Isolator
- USB A-B Cable 4001-112
- Instructions 8500-900



This kit contains a USB isolator and a 1M USB A-B cable for connection to a PC. This isolator and cable are also included in TTC-SIP (see above).

### USB A-B Cable

#### USB A-B Cable – Order 4001-112

USB A-B Cable 4001-112



This is a 1 meter, USB A-B replacement cable for connection between your PC and the USB isolator. It is normally included with the TTC-SIP Software Interface Package and also with the isolator model USB-ISOLATOR.

### USB A-mini B Cable

#### USB A-mini B Cable – Order 4001-113

- USB A-mini B Cable 4001-113



This is a 1 meter, USB A-miniB replacement cable for connection between the USB isolator and the TT230 transmitter. It is normally included in TTC-SIP.

***Note that software for all TT Series models is available free of charge, online at [www.acromag.com](http://www.acromag.com).***

## USB OTG Cable



### **USB OTG Cable – Order 5028-565**

- USB OTG Cable 5028-565

This is a 6 inch, USB On-The-Go cable for connection between the USB A-mini B Cable and a mobile phone or tablet. It is required to use the Acromag Agility™ Config Tool App.

***Note that the Acromag Agility™ Config Tool is available free of charge, online at the Google Play store.***

## End Stops

No picture available.

### **End Stops – Order 1027-222**

- End Stops for 35 mm DIN Rails 1027-222

For hazardous location installations (Class I, Division 2 or ATEX Zone 2) it must use two end stops (Acromag 1027-222) to secure the module(s) to the DIN rail (not shown).

## SPECIFICATIONS

### Model Number

*Model TT233-0600*

*Signal Transmitter*

*Isolated T/C Input*

*Two-Wire Loop-Powered*

*CE Approved*

*UL/cUL Class 1, Division 2*

*approvals*

*Custom calibration to your specifications can be added as a separate line item at time of purchase.*

The TT233 model prefix denotes an isolated thermocouple input type of the DIN-Rail Mounted Series 230 "Thin Transmitter" family. The "-0600" model suffix denotes a two-wire loop powered unit with CE and UL/cUL Class 1, Division 2 Approvals.

Optional factory calibration to your own specifications is ordered as a separate line item at time of purchase, and on a per unit basis. Factory calibration will require the specification of input type (J, K, T, E, R, S, B, N, or  $\pm 100\text{mV}$ ), input range Zero (mV or  $^{\circ}\text{C}$ ), Input range Full-Scale, and Sensor Fault Direction (Upscale or Downscale). You can also specify a normal or reverse acting output, a filter level (none, low, medium, or high), and whether CJC is ON or OFF. You can obtain form 8500-858 for specifying this calibration from our web site at [www.acromag.com](http://www.acromag.com).

Standard models without adding custom factory configuration/calibration are calibrated by default to reference test conditions for T/C Type J, with  $0^{\circ}\text{C}$  to  $200^{\circ}\text{C}$  input mapped to a normal acting 4 to 20mA at the output, upscale fault detection, and CJC ON. Recalibration of any model will require use of the TTC-SIP configuration kit, ordered separately (see Accessories).

Models can be mounted on standard "T" type DIN rail.

### Input

**Reference Test Conditions:** TC Type J with a 10mV minimum span (e.g. Type J with  $200^{\circ}\text{C}$  span), or  $\pm 100\text{mV}$  range with a 10mV minimum calibrated span; Output 4-20mA; Ambient =  $25^{\circ}\text{C}$ ; Power Supply = 24VDC; R-load =  $250\Omega$ .

**Input & Accuracy:** Configurable for native input types/ranges shown in Table 1 below. Unit provides T/C linearization, T/C Cold-Junction Compensation (CJC), and lead break detection.

Table 1: Range/Accuracy		ISA/ANSI Color	$^{\circ}\text{C}$ Temp Range	Typical <sup>1</sup> Accuracy
T/C	T/C Material			
J	+Iron,-Constantan	White/Red	-210 to $+760^{\circ}\text{C}$	$\pm 0.5^{\circ}\text{C}$
K	+Chromel,-Alumel	Yellow/Black	-200 to $+1372^{\circ}\text{C}$	$\pm 0.5^{\circ}\text{C}$
T	+Copper,-Constantan	Blue/Red	-260 to $+400^{\circ}\text{C}$	$\pm 0.5^{\circ}\text{C}$
R	+Pt/13%Rh, -Constantan	Black/Red	- 50 to $+1768^{\circ}\text{C}$	$\pm 1.0^{\circ}\text{C}$
S	+Pt/10%Rh, -Constantan	Black/Red	- 50 to $+1768^{\circ}\text{C}$	$\pm 1.0^{\circ}\text{C}$
E	+Chromel,-Constantan	Purple/Red	-200 to $+1000^{\circ}\text{C}$	$\pm 0.5^{\circ}\text{C}$
B	+Pt/10%Rh, -Pt/6%Rh	Gray/Red	$+260$ to $1820^{\circ}\text{C}$	$\pm 1.0^{\circ}\text{C}$
N	+Nicrosil, -NISIL	Orange/Red	-230 to $-170^{\circ}\text{C}$ ; $-170$ to $+1300^{\circ}\text{C}$	$\pm 1.0^{\circ}\text{C}$ $\pm 0.5^{\circ}\text{C}$
mV	NA	NA	$\pm 100\text{mV}$	$\pm 0.05\%$ $\pm 0.1\%$ Max



**Input...**

<sup>1</sup>**Note (Table 1):** Accuracy is  $\pm 0.1\%$  of the full-scale span, typical, or per table 1 specification, whichever is greater.

<sup>2</sup>**Note (Table 1):** Accuracy is given with CJC switched off. CJC uncertainty should be combined with the uncertainty numbers of Table 1 to determine a potential overall inaccuracy. Relative inaccuracy with CJC enabled may increase by as much as  $\pm 0.5^\circ\text{C}$  during the post power-on warm-up period, but will be  $\pm 0.2^\circ\text{C}$  typical after nearing thermal equilibrium in about ten minutes.

**Input CJC Reference Accuracy (T/C Inputs Only):** Factory calibrated to  $\pm 0.1^\circ\text{C}$  at  $25^\circ\text{C}$ . CJC accuracy over the full operating temperature range will be  $\pm 1.0^\circ\text{C}$ .

**Note (CJC):** Cold Junction Compensation may be switched off to permit the direct connection of a mV source via copper wires to the input to simplify calibration. Otherwise a hand-held calibrator may be used. For best results, allow the module to reach thermal equilibrium and warm up for 10 minutes prior to calibrating CJC. During calibration, physically position the module the same as its field application. Input is normally calibrated with CJC OFF, and CJC calibration is done separately.

**Input Linearization (T/C Inputs):** Within  $\pm 0.25^\circ\text{C}$  of the NIST tables.

**Input Analog to Digital Converter (A/D):** Input utilizes 16-bit  $\Sigma$ - $\Delta$  conversion normalized to a bipolar range count of  $\pm 20000$ .

**Input Zero and Full-Scale Adjustment:** Input range endpoints are selectable over the full range indicated in Table 1 for each type. Input Zero and Full-Scale must be within range and will be mapped to 4mA and 20mA at the output. Your input resolution is reduced and error is magnified as your programmed input range is reduced. Nominal rated  $\pm 0.1\%$  error assumes a minimum input span of 10mV.

**Input Resolution:** T/C Input uses 16-bit bipolar conversion with 0mV corresponding to 32768. Resolution is further normalized to a bipolar range count of  $\pm 20000$ . Your effective resolution is constrained by your input range, its corresponding gain, and normalization. An indication of relative input resolution can be seen by noting the number of parts between the calibration low and high points shown in Table 2:

<b>Table 2: Input Resolution Per Calibration Range</b>	
<b>Input Range</b>	<b>Effective Resolution Bet Cal LO/ Cal HI</b>
$\pm 100\text{mV DC}$	$\pm 20000$ or 1 part in 40000 for -100mV to +100mV
T/C Type J, -210 to $+760^\circ\text{C}$	1 part in 17096 for $0$ - $700^\circ\text{C}$ (0.000 to 39.130mV)
T/C Type K, -200 to $+1372^\circ\text{C}$	1 part in 22893 for $0$ - $1300^\circ\text{C}$ (0.000 to 52.398mV)
T/C Type T, -260 to $+400^\circ\text{C}$	1 part in 17696 for $0$ - $390^\circ\text{C}$ (0.000 to 20.252mV)
T/C Type R, - 50 to $+1768^\circ\text{C}$	1 part in 17664 for $0$ - $1700^\circ\text{C}$ (0.000 to 20.215mV)
T/C Type S, - 50 to $+1768^\circ\text{C}$	1 part in 15678 for $0$ - $1700^\circ\text{C}$ (0.000 to 17.942mV)
T/C Type E, -200 to $+1000^\circ\text{C}$	1 part in 15858 for $0$ - $950^\circ\text{C}$ (0.000 to 72.593mV)
T/C Type B, +260 to $1820^\circ\text{C}$	1 part in 21162 for $0$ - $1700^\circ\text{C}$ (0.317 to 12.426mV)
T/C Type N, -230 to $+1300^\circ\text{C}$	1 part in 19152 for $0$ - $1200^\circ\text{C}$ (0.000 to 43.836mV)
CJC Sensor (Internal Use Range)	1 part in 13653 for $25.0^\circ\text{C}$ to $125.0^\circ\text{C}$ (0.375V to 0.875V)

Your resolution will be proportionally diminished as you reduce the input range. The effective input-to-output resolution of your transmitter will be the lowest resolution of either the input A/D conversion (less than or equal to 1 part in 40000, Table 2), or the temperature resolution of  $0.1^\circ\text{C}$  applied to TC inputs (from the internal TC lookup tables). The output DAC resolution is always greater at 1 part in 54613 for 4-20mA and will never be the limiting factor. In most cases, your resolution will be dominated by the  $0.1^\circ\text{C}$  temperature resolution for thermocouple inputs.

## Input...

**Input Common Mode Noise Rejection:** 155dB at 60Hz w/100 ohm input unbalance, typical.

**Input Lead Break Detection:** Can be selected for Upscale or Downscale open sensor or lead break detection. Upscale limit is 24mA, downscale limit is less than 3.7mA.

**IMPORTANT:** Calibration should be done with the break detection already set as required by the application, as changing it will affect the current calibration slightly.

**Input Bias Current:**  $\pm 125\text{nA}$  typical (TC break detect current).

**Input Over-Voltage Protection:** Bipolar Transient Voltage Suppressers (TVS),  $\pm 5.6\text{V}$  clamp level typical. Also includes differential input diode clamping, capacitive filtering, and series resistance.

**Input Conversion Rate:** See Output Response Time.

**Input Filter Bandwidth:** Normal mode filtering, plus digital filtering within the  $\Sigma$ - $\Delta$  ADC. Bandwidth (-3dB) varies with digital filter selection as follows: 4Hz w/No Filter, 1.2Hz Low Filter, 0.98Hz Medium Filter, and 0.33Hz High Filter.

## Output

**Output Range:** 4 to 20mA DC nominal range, with under-range capability down to 3.5mA, and over-range capability up to 24mA. Upscale and downscale limits are 24mA and 3.3mA (DAC error) or 3.5mA (downscale break) respectively. The output signal is linear with respect to input temperature in degrees Celsius (T/C inputs), or voltage ( $\pm 100\text{mV}$  input).

**Output Accuracy:** Better than  $\pm 0.1\%$  of span or  $\pm 0.01\text{mV}$  typical, whichever is greater, assuming 10mV minimum input spans and a 16mA output span. Relative accuracy varies with calibrated input and output span. Refer to Table 1 for relative I/O accuracy referred to the input for different input types. Accuracy includes the combined effects of repeatability, terminal point conformity, and linearization, but does not include sensor error.

**Output Ripple/Noise:** Less than  $\pm 0.1\%$  of output span.

**Note – High Speed Acquisition:** Additional filtering at the load is recommended for sensitive applications with high-speed acquisition rates. High frequency noise may be reduced or eliminated by placing a 0.1 $\mu\text{F}$  capacitor directly across the load. For excessive 60Hz supply ripple, a 1 $\mu\text{F}$  or larger capacitor is recommended at the load.

**Output Ambient Temperature Effect:** The combined effect of zero and span drift over temperature is better than  $\pm 0.008\%$  of span per  $^{\circ}\text{C}$  ( $\pm 80\text{ppm}/^{\circ}\text{C}$ ) over the full ambient temperature range for reference test conditions (see Input Specifications).

**Output DAC Resolution:** Output DAC is 16-bit and its output current is approximated via the expression  $(\text{programmed\_count}/65536)*24\text{mA}$ . The min loop current is 3.34mA, typical, which is approximated via a DAC program count of 9120. Likewise, 4mA corresponds to a count value of  $\sim 10923$ , and 20mA to  $\sim 54613$ . Thus, for the 4-20mA output range, we have an output resolution of 54613-10923, or 1 part in 43690. The output resolution is always greater than the input resolution on this model and the effective I/O resolution of this unit will be the lowest resolution of the input, or the 0.1 $^{\circ}\text{C}$  temperature resolution of T/C inputs.

**Output...**

**Output Response Time:** For an input step change driving 4 to 20mA into a 250Ω load with a 24V loop power supply, the response time varies with the digital filter level as follows:

FILTER LEVEL	RESPONSE TIME (TYPICAL)
No Digital Filtering	104ms
Low Filter	380ms
Medium Filter	760ms
High Filter	960ms

**Output Power Supply:** 12-32V DC SELV (Safety Extra Low Voltage), 24mA maximum. The supply voltage across the transmitter must not exceed 36V, even with a shorted load. The supply voltage level must be chosen to provide a minimum of full-scale current to the load (0.020\*R typical), plus 11V minimum to the transmitter terminals, plus any line drop. Ideally, your supply should drive over-scale current levels up to 24mA into load. Reverse polarity protection is included as output terminals are not polarized. The ± output polarity labels on the enclosure are for reference only.

**CAUTION:** Do not exceed 36VDC peak to avoid damage to the unit. Terminal voltage above 11V minimum must be maintained across the unit during operation.

**Output Power Supply Effect:** Less than ±0.001% of output span effect per volt DC of supply change.

**Output Compliance and Load Resistance Equation:** 11V minimum, transmitter. Unit will drive 13V typical to the load with a 24V loop supply and 20mA loop current (650Ω), assuming negligible line drop. Compute  $R_{load} (Max) = (V_{supply} - 11V)/0.020A$  for 20mA full-scale output current. If you need to drive over-scale current of 24mA, adjust the 0.020A denominator of this expression to 0.024A. Refer to the following table:

V <sub>supply</sub> Volts	Max R <sub>load</sub> w/20mA & No Line Drop
12V	50Ω
18V	350Ω
24V	650Ω
32V	1050Ω

**Output Load Resistance Effect:** Less than ±0.005% of output span effect for a ±100Ω change in load resistance.

**USB Interface**



Includes a USB socket for temporary connection to a PC or laptop for the purpose of setup and reconfiguration. USB isolation is required when connected to a grounded input sensor or driver (see note at right). During reconfiguration and calibration, the transmitter receives power from both the USB port and the output loop. Both power sources must be present to calibrate the unit.

**CAUTION:** Do not attempt to connect USB in a hazardous environment. Transmitter should be setup and configured in a safe environment only.

**Data Rate:** USB v1.1 full-speed only, at 12Mbps. Up to 32K commands per second. USB 2.0 compatible.

**Transient Protection:** Adds transient voltage protection on USB power & data lines.

**Inrush Current Limiting:** Includes series inrush current limiting at USB power.

**Cable Length/Connection Distance:** 5.0 meters maximum.

**Driver:** No special drivers required. Uses the built-in USB Human Interface Device (HID) drivers of the Windows Operating System (Windows XP or later versions only).

## USB Interface...

**USB Connector:** 5-pin, Mini USB B-type socket, Molex 67503-1020.

PIN	DEFINITION
1	+5V Power (Includes Inrush Current Limiting)
2	Differential Data (+)
3	Differential Data (-)
4	NC – Not Connected
5 <sup>1</sup>	Power Ground (Connects to Signal Ground via ferrite bead)
SHLD <sup>1</sup>	Signal Ground (Connects directly to Signal Ground)

<sup>1</sup>**Note:** Most Host Personal Computers (except battery powered laptops) will connect earth ground to the USB shield and signal ground.

**IMPORTANT – USB Isolation is recommended:** The input of this transmitter is isolated from its output and can be connected to grounded or un-grounded input sensors. However, the transmitter's input circuit ground is connected in common to the USB power/signal ground and shield ground. This will make a connection to earth ground at the PC when directly connected to the USB port of a Personal Computer without the use of an isolator. Failure to connect USB without isolation would connect the 1.25 input bias supply to input ground if the sensor was also earth grounded. This will interfere with operation and cause the output to shift. For this reason, USB isolation is strongly recommended when connecting to a PC. Otherwise, in the absence of USB isolation, and when connected to a grounded input sensor, a battery powered laptop could be used to connect to the unit, as the laptop does not normally connect to earth ground.

## Enclosure & Physical

General purpose plastic enclosure for mounting on 35mm "T-type" DIN rail.

**Dimensions:** Width = 12.5mm (0.5 inches), Length = 114.5mm (4.51 inches), Depth = 99.0mm (3.90 inches). Refer to Mechanical Dimensions drawing.

**I/O Connectors:** Removable plug-in type terminal blocks rated for 12A/250V; AWG #26-12, stranded or solid copper wire.

**Program Connector:** USB Mini B-type, 5-pin. See USB Interface.

**Case Material:** Self-extinguishing polyamide, UL94 V-0 rated, color light gray.

General purpose NEMA Type 1 enclosure.

**Circuit Board:** Military grade fire-retardant epoxy glass per IPC-4101/98 with humi-seal conformal coating.

**DIN-Rail Mounting:** Unit is normally mounted to 35x15mm, T-type DIN rails. Refer to the DIN Rail Mounting & Removal section for more details.

**Shipping Weight:** 0.5 pounds (0.22 Kg) packed.

## Environmental

*These limits represent the minimum requirements of the applicable standard, but this product has typically been tested to comply with higher standards in some cases.*

**Operating Temperature:** -40°C to +80°C (-40°F to +176°F).

**Storage Temperature:** -40°C to +85°C (-40°F to +185°F).

**Relative Humidity:** 5 to 95%, non-condensing.

**Isolation:** Input/USB and the output/power circuits are isolated from each other for common-mode voltages up to 250VAC, or 354V DC off DC power ground, on a continuous basis (will withstand 1500VAC dielectric strength test for one minute without breakdown). Complies with test requirements of ANSI/ISA-82.01-1988 for voltage rating specified.

**Environmental...**

**Installation Category:** Suitable for installation in a Pollution Degree 2 environment with an Installation Category (Over-voltage Category) II rating per IEC 1010-1 (1990).

**Shock & Vibration Immunity:** Conforms to: IEC 60068-2-6: 10-500 Hz, 4G, 2 Hours/axis, for sinusoidal vibration; IEC 60068-2-64: 10-500 Hz, 4G-rms, 2 Hours/axis, for random vibration, and IEC 60068-2-27: 25G, 11ms Half-sine, 18 shocks at 6 orientations, for mechanical shock.

**Electromagnetic Compatibility (EMC)****Minimum Immunity per BS EN 61000-6-1:**

Electrostatic Discharge Immunity (ESD), per IEC 61000-4-2.

Radiated Field Immunity (RFI), per IEC 61000-4-3.

Electrical Fast Transient Immunity (EFT), per IEC 61000-4-4.

Surge Immunity, per IEC 61000-4-5.

Conducted RF Immunity (CRFI), per IEC 61000-4-6.

**This is a Class B Product with Emissions per BS EN 61000-6-3:**

Enclosure Port, per CISPR 16.

Low Voltage AC Mains Port, per CISPR 14, 16.

DC Power Port, per CISPR 16.

Telecom / Network Port, per CISPR 22.

## Agency Approvals

**Electromagnetic Compatibility (EMC):** CE marked, per EMC Directive 2004/108/EC. Consult factory.

**Safety Approvals:** UL Listed (USA & Canada). Hazardous Locations – Class I, Division 2, Groups A, B, C, D Hazardous Location or Nonhazardous Locations only. These devices are open-type devices that are to be installed in an enclosure suitable for the environment. Consult Factory.

**ATEX Certified:** Model TT233-0600 is ATEX Certified for Explosive Atmospheres per ATEX Directive 94/9/EC which complies with standards BS EN 60079-0:2012 & BS EN 60079-15:2010.

Ⓔ II 3 G Ex nA IIC T4 Gc -40°C ≤ Ta ≤ +80°C

DEMKO 15 ATEX 1561X

X = Special Conditions

- 1) The equipment shall only be used in an area of not more than pollution degree 2, as defined in EN 60664-1.
- 2) The equipment shall be installed in an enclosure that provides a degree of protection not less than IP 54 and only accessible with the use of a tool in accordance with EN 60079-15.
- 3) Transient protection shall be provided that is set at a level not exceeding 140 % of the peak rated voltage value at the supply terminals to the equipment.

## Reliability Prediction

**MTBF (Mean Time Between Failure):** MTBF in hours using MIL-HDBK-217F, FN2. *Per MIL-HDBK-217, Ground Benign, Controlled, G<sub>B</sub>G<sub>C</sub>*

Temperature	MTBF (Hours)	MTBF (Years)	Failure Rate (FIT)
25°C	1,619,617 hrs	184.9 years	645
40°C	1,081,725 hrs	123.5 years	924

## Configuration Controls

*Refer to Operation Step-By-Step in the Technical Reference section of this manual for detailed information on available software control of this model.*

### **Software Configuration Only via USB**

This transmitter drives an analog output current proportional to a sensor input based on the differential voltage measurement across the sensor. No switches or potentiometers are used to make adjustments to this transmitter. Its behavior as an isolated signal amplifier/transducer is determined via programmed variables set using a temporary USB connection to a host computer or laptop running a Windows-compatible configuration software program specific to the transmitter model. This software provides the framework for digital control of all configuration parameters and this information is stored in non-volatile memory.

## Revision History

The following table show the revision history for this document:

Release Date	Version	EGR/DOC	Description of Revision
08-FEB-12	A	BC/KLK	Initial Acromag release.
26-JULY-13	B	CAP/ARP	Added UL Mark to this model (removed pending), refer to ECN #13G017 for additional information.  Added note to USB connections drawing, refer to ECN #13F005 for additional information.
16-DEC-13	C	JEB/ARP	Updated MTBF Numbers. Removed P.O. Box from address.
15-OCT-2015	D	CAP/MJO	Added ATEX symbols / statements.
19-AUG-2016	E	CAP/MJO	Corrected "Shock and Immunity" specifications.