

**RETIRED**

**antaira**

**5-port / 8-port 10/100BaseTX  
Industrial Ethernet Switch**



**User Manual**

**antaira**  
[www.antaira.com](http://www.antaira.com)

# Content

---

Overview .....	1
Introduction .....	1
Features .....	3
Packing List.....	4
Safety Precaution.....	4
Hardware Description.....	5
Front Panel.....	5
Top View .....	6
Wiring the Power Inputs .....	6
Wiring the Fault Alarm Contact .....	7
LED Indicators.....	8
Ports .....	8
Cabling .....	10
Mounting Installation .....	11
DIN-Rail Mounting.....	11
Wall Mount Plate Mounting .....	13
Hardware Installation .....	14

Installation Steps.....	14
Troubles shooting.....	16
Technical Specification .....	17

# Overview

---

## Introduction

This user manual is suitable for the products as follows:

- 5-port 10/100TX Unmanaged Industrial Switch
- 8-port 10/100TX Unmanaged Industrial Switch

The unmanaged industrial switch is a cost-effective solution and meets the high reliability requirements demanded by industrial applications.

### High-Speed Transmissions

The Industrial switch includes a switch controller that can automatically sense transmission speeds (10/100 Mbps). The RJ-45 interface can also be auto-detected, so MDI or MDI-X is automatically selected and a crossover cable is not required. All Ethernet ports have memory buffers that support the store-and-forward mechanism. This assures that data is properly transmitted.

### Dual Power Input

To reduce the risk of power failure, the Industrial switch provides +12 ~ 48 VDC dual power inputs. If there is power failure, Industrial switch will automatically switch to the secondary power input.

### Flexible Mounting

The industrial switch is extremely compact and can be mounted on a DIN-rail or a panel, so it is suitable for any space-constrained environment.

### Advanced Protection

The power line of Industrial switch supports up to 3,000 VDC EFT protection, which secure equipment against unregulated voltage and make systems safer and more reliable. Meanwhile, 4,000 VDC ESD protections for Ethernet ports make Industrial switch more suitable for harsh environments.

### **Wide Operating Temperature**

The operating temperature of the Industrial switch is between -40 ~ 80 °C (wide operating temperature model) or -10 ~ 70 °C (standard model).

With such a wide range, you can use the Industrial switch in some of the harshest industrial environments that exist.

### **Easy Troubleshooting**

LED indicators make troubleshooting quick and easy. Each 10/100 Base-TX port has 2 LEDs that display the link status, transmission speed and collision status. Also the three power indicators P1, P2 and Fault help you diagnose immediately.

## Features

- Provides 5 x 10/100 Mbps (5-port 10/100TX model) or 8 x 10/100 Mbps (8-port 10/100TX model) Ethernet ports.
- Supports full/half duplex flow control
- Supports MDI/MDI-X auto-crossover
- Supports surge (EFT) protection 3,000 VDC for power line
- Supports 4,000 VDC Ethernet ESD protection
- Provides broadcast storm protection
- Embedded with a switch controller, supports auto-negotiation
- Embedded with memory buffer, supports store & forward transmission
- Supports redundant +12 ~ 48 VDC power input
- Provides flexible mounting: DIN-rail, Panel Mounting
- Supports operating temperatures from -40 ~ 80 °C (wide operating temperature model) or -10 ~ 70 °C (standard model)

## **Packing List**

- 1 x 5-port 10/100TX Industrial Ethernet Switch, or 1x 8-port 10/100TX Industrial Ethernet Switch
- 1 x User Manual
- 2 x Wall Mounting Bracket and Screws

## **Safety Precaution**

*Attention IF DC voltage is supplied by an external circuit, please use a protection device on the power supply input.*


# Hardware Description

---

In this paragraph, we will introduce the Industrial switch's hardware spec, port, cabling information, and wiring installation.

## Front Panel

The Front Panel of the 5-port and 8-port 10/100BaseTX Industrial Switch is shown as below.

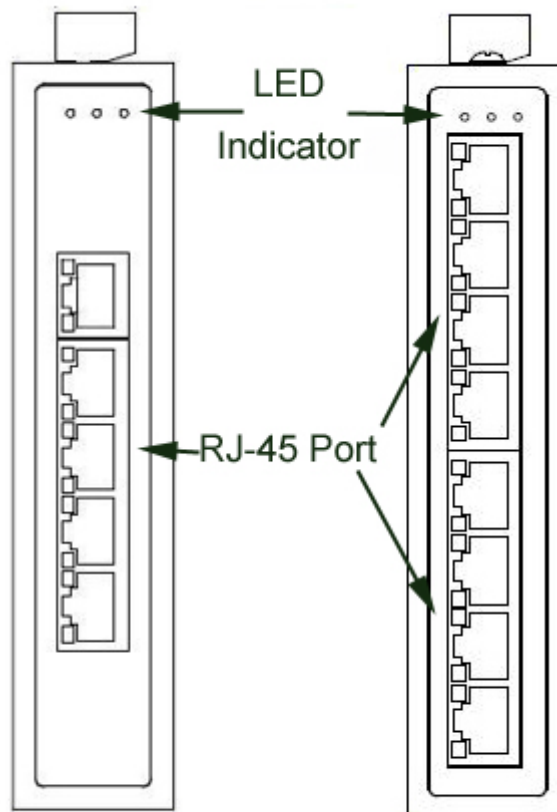


Front Panel of the 5-port & 8-port 10/100BaseTX Industrial Switch



## Top View


The top panel of the 5-port & 8-port 10/100BaseTX Industrial Switch is equipped one terminal block connector of two DC power inputs.

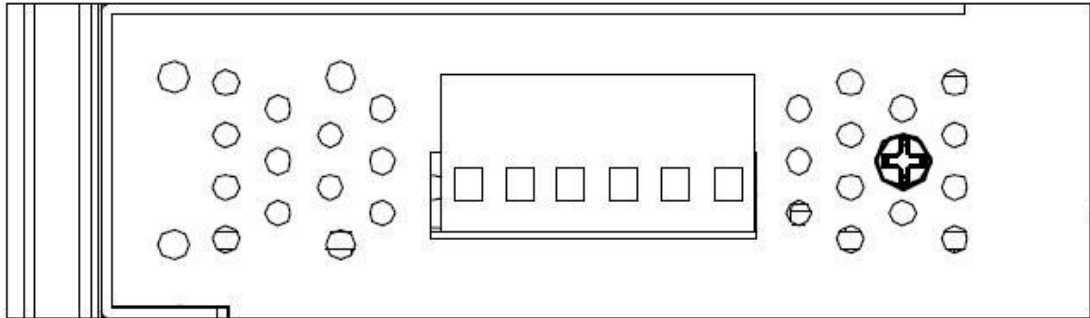


Top Panel of the 5-port & 8-port 10/100BaseTX Industrial Switch

## Wiring the Power Inputs

Please follow the steps below to insert the power wire.

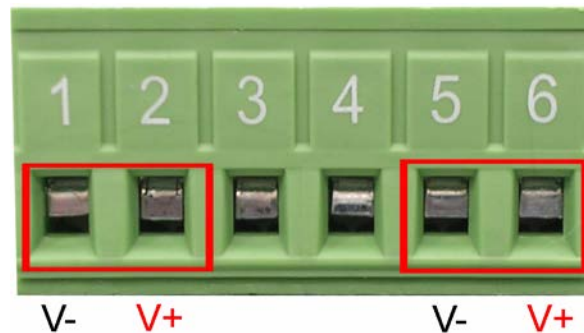


1. Insert the positive and negative wires into the V+ and V- contacts on the terminal block connector.

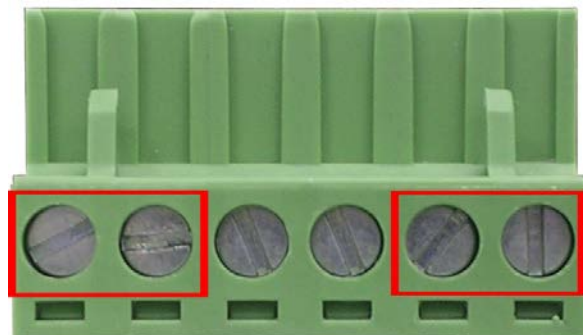

2. To tighten the wire-clamp screws for preventing the DC wires to loose.

## Wiring the Fault Alarm Contact

The fault alarm contact is in the middle of terminal block connector as the picture shows below. Inserting the wires, it will detect the fault status which the power is failure or port link failure (for managed model) and form an open circuit.

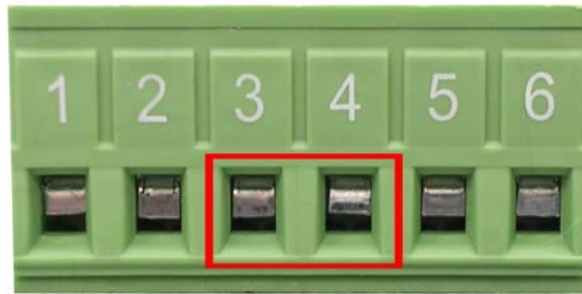

Insert the wires into the fault alarm contact (No. 3 & 4)

---

**Note**      *The wire gauge for the terminal block should be in the range between 12~24 AWG.*

***If only using one power source, jumper Pin 1 to Pin 5 and Pin 2 to Pin 6 to eliminate power fault alarm.***

---

## LED Indicators

There are few LEDs display the power status and network status located on the front panel of the Industrial switch, each of them has its own specific meaning as below table.

LED	Color	Description	
P1	Green	On	Power input 1 is active
		Off	Power input 1 is inactive
P2	Green	On	Power input 2 is active
		Off	Power input 2 is inactive
Fault	Red	On	Power input 1 or 2 is inactive
		Off	Power input 1 and 2 are both functional, or no power inputs
Link/Active (1~5 or 1~8)	Green	On	Connected to network
		Flashing	Networking is active
		Off	Not connected to network
Duplex/Collision (1~5 or 1~8)	Orange	On	Ethernet port full duplex
		Flashing	Collision of packets occurs
		Off	Ethernet port half duplex or not connect to network

## Ports

**RJ-45 ports (Auto MDI/MDIX):** The RJ-45 ports are auto-sensing for 10Base-T or 100Base-TX devices connections. Auto MDI/MDIX means that you can connect to another switch or workstation without changing straight through or crossover cabling. See figures as below for straight through and crossover cable schematic.

### ■ RJ-45 Pin Assignments



Pin Number	Assignment
1	Tx+
2	Tx-
3	Rx+

6	Rx-
---	-----


*Note* “+” and “-” signs represent the polarity of the wires that make up each wire pair.

All ports on this industrial switch support automatic MDI/MDI-X operation, you can use straight-through cables (See Figure below) for all network connections to PCs or servers, or to other switches or hubs. In straight-through cable, pins 1, 2, 3, and 6, at one end of the cable, are connected straight through to pins 1, 2, 3 and 6 at the other end of the cable. The table below shows the 10BASE-T/ 100BASE-TX MDI and MDI-X port pin outs.

Pin MDI-X	Signal Name	MDI Signal Name
1	Receive Data plus (RD+)	Transmit Data plus (TD+)
2	Receive Data minus (RD-)	Transmit Data minus (TD-)
3	Transmit Data plus (TD+)	Receive Data plus (RD+)
6	Transmit Data minus (TD-)	Receive Data minus (RD-)

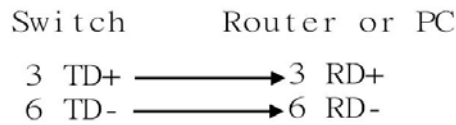

Straight Through Cable Schematic

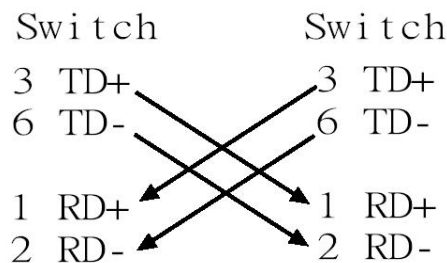

Cross Over Cable Schematic

## **Cabling**


Use the four twisted-pair, Category 5 cabling for RJ-45 port connection. The cable between the converter and the link partner (switch, hub, workstation, etc.) must be less than 100 meters (328 ft.) long.

# Mounting Installation

---


## DIN-Rail Mounting

The DIN-Rail is screwed on the industrial switch when out of factory. If the DIN-Rail is not screwed on the industrial switch, please see the following figure to screw the DIN-Rail on the switch. Follow the below steps to hang the industrial switch.

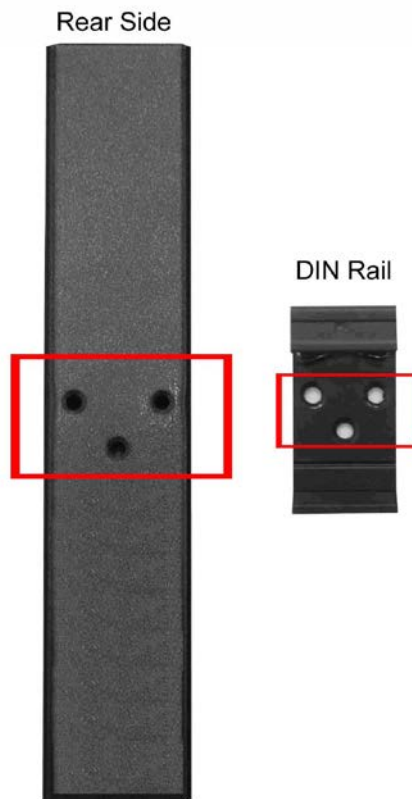


1. Use the screws to screw on the DIN-Rail on the industrial switch
2. To remove the DIN-Rail, reverse the step 1.

3. First, insert the top of DIN-Rail into the track.

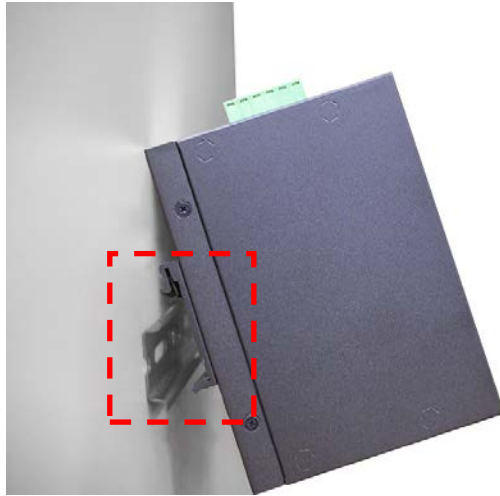

4. Then, lightly push the button of DIN-Rail into the track.

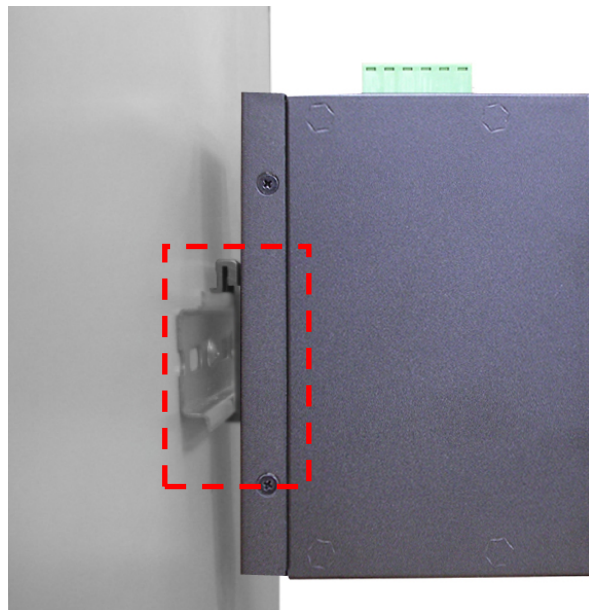


5. Check the DIN-Rail is tightly on the track.
6. To remove the industrial switch from the track, reverse steps above.

## Wall Mount Plate Mounting

Follow the steps below to mount the industrial switch with wall mount plate.

1. Remove the DIN-Rail from the industrial switch; loose the screws to remove the DIN-Rail.
2. Place the wall mount plate on the rear panel of the industrial switch.
3. Use the screws to screw the wall mount plate on the industrial switch.
4. Use the hook holes at the corners of the wall mount plate to hang the industrial switch on the wall.
5. To remove the wall mount plate, reverse steps above.

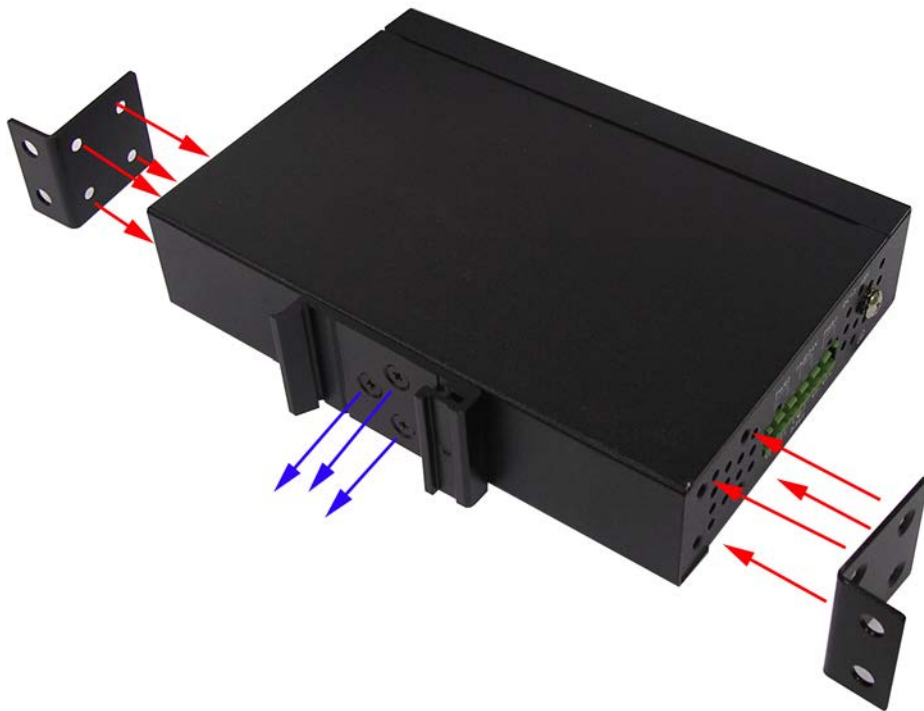




# Hardware Installation

---

In this paragraph, we will describe how to install the 5-port or 8-port 10/100Base-TX Industrial Switch and the installation points for the attention.

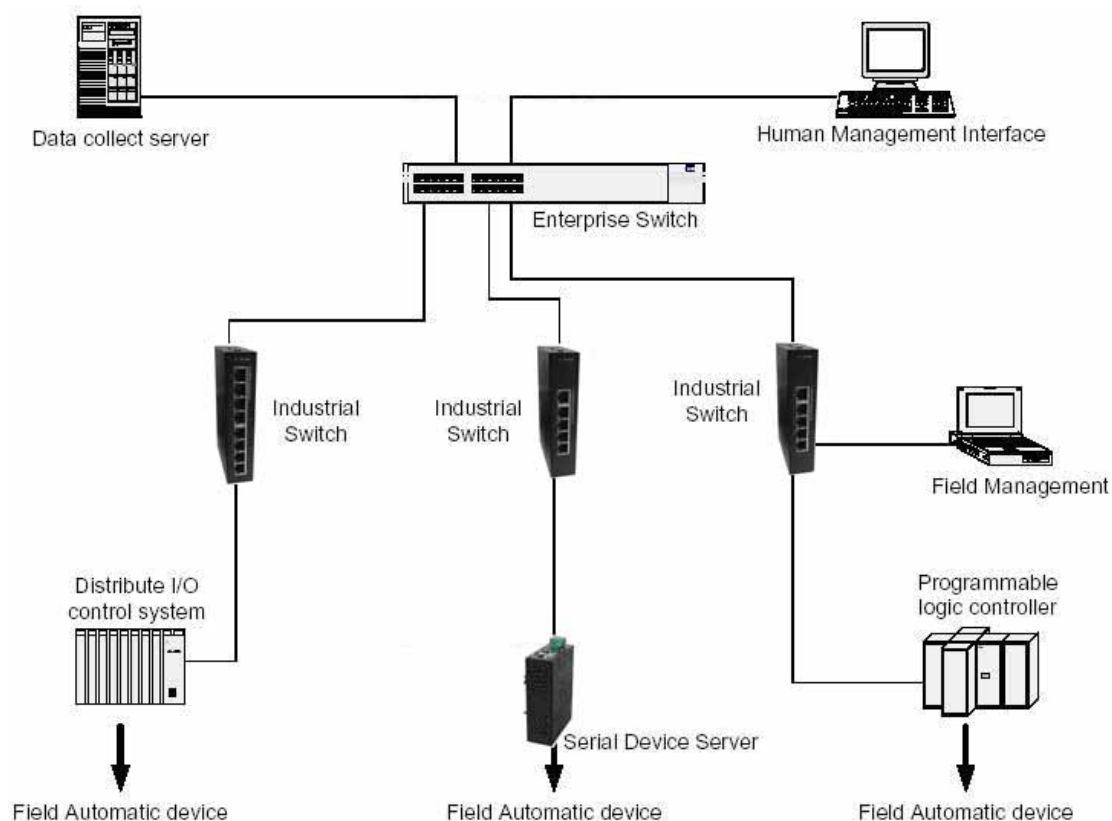

## Installation Steps

1. Unpack the Industrial switch packing.
2. Check the DIN-Rail is screwed on the Industrial switch. If the DIN-Rail is not screwed on the Industrial switch. Please refer to **DIN-Rail Mounting** section for DIN-Rail installation. If you want to wall mount the Industrial switch, then please refer to **Wall Mount Plate Mounting** section for wall mount plate installation.
3. To hang the Industrial switch on the DIN-Rail track or wall, please refer to the **Mounting Installation** section.

4. Power on the Industrial switch. How to wire the power; please refer to the **Wiring the Power Inputs** section. The power LED on the Industrial switch will light up. Please refer to the **LED Indicators** section for meaning of LED lights.
5. Prepare the twisted-pair, straight through Category 5 cable for Ethernet connection.
6. Insert one side of Category 5 cables into the Industrial switch Ethernet port (RJ-45 port) and another side of category 5 cables to the network devices' Ethernet port (RJ-45 port), ex: switch, Pc or Server. The UTP port (RJ-45) LED on the Industrial switch will light up when the cable connected with the network device. Please refer to the **LED Indicators** section for LED light meaning.

*Note Be sure the connected network devices support MDI/MDI-X. If it does not support, then use the crossover category 5 cable.*

7. When all connections are all set and LED lights all show in normal, the installation is complete.

# Troubles shooting

---

- Verify that you are using the right power cord/adapter (DC 12-48V), please don't use the power adapter with DC output bigger than 48V, or it will burn this converter down.
- Select the proper UTP cable to construct your network. Please check that you are using the right cable. Use unshielded twisted-pair (UTP) or shield twisted-pair (STP) cable for RJ-45 connections: 100Ω Category 3, 4, or 5 cable for 10Mbps connections or 100Ω Category 5 cable for 100Mbps connections. Also be sure that the length of any twisted-pair connection does not exceed 100 meters (328 feet).
- **Diagnosing LED Indicators:** the Switch can be easily monitored through panel indicators to assist in identifying problems, which describes common problems you may encounter and where you can find possible solutions.
- IF the power indicator does not light on when the power cord is plugged in, you may have a problem with power cord. Than check for loose power connections, power losses or surges at power outlet. IF you still cannot resolve the problem, contact your local dealer for assistance.
- If the Industrial switch LED indicators are normal and the connected cables are correct and the packets still cannot transmit. Please check your system's Ethernet devices' configuration or status.

# Technical Specification

---

The technical specifications of the Industrial Switch are listed as follows.

## Communications

<b>Compatibility</b>	IEEE 802.3, 802.3u
<b>LAN</b>	10/100Base-TX
<b>Transmission Distance</b>	Up to 100 m
<b>Transmission Speed</b>	Up to 100 Mbps

## Interface

<b>Connectors</b>	5 x RJ-45 (5-port 10/100TX) 8 x RJ-45 (8-port 10/100TX) 6-pin removable screw terminal (power)
<b>LED Indicators</b>	Unit: P1, P2, Fault TX port: Link/Active, Full Duplex/Collision

## Power

<b>Power Consumption</b>	5-port 10/100TX: 2.93W (standard model) 2.88W (wide operating temp. model) 8-port 10/100TX: 4.71W (standard model) 3.84W (wide operating temp. model)
<b>Power Input</b>	2 x Unregulated +12 ~ 48 VDC
<b>Fault Output</b>	1 Relay Output

## Mechanism

<b>Dimensions (WxHxD)</b>	30 x 95 x 140
<b>Enclosure</b>	IP-30, Metal shell with solid mounting kits
<b>Mounting</b>	DIN35 rail, Wall

## Protection

<b>ESD (Ethernet)</b>	4,000 VDC
<b>Surge (EFT for power)</b>	3,000 VDC
<b>Power Reverse</b>	Yes

## Environment

<b>Operating Temperature</b>	-40 ~ 80 °C (wide operating temp. model) -10 ~ 70 °C (standard model)
<b>Operating Humidity</b>	5% ~ 95% (non-condensing)
<b>Storage Temperature</b>	-40 ~ 85 °C

## Certifications

<b>Safety</b>	UL, cUL, CE EN60950-1
<b>EMC</b>	FCC Class A,

	CE EN61000-4-2 (ESD)
	CE EN61000-4-3 (RS)
	CE EN61000-4-4 (EFT)
	CE EN61000-4-5 (Surge)
	CE EN61000-4-6 (CS)
	CE EN61000-4-8
	CE EN61000-4-11
	CE EN61000-4-12
	CE EN61000-6-2
	CE EN61000-6-4
<b>Free Fall</b>	IEC60068-2-32
<b>Shock</b>	IEC60068-2-27
<b>Vibration</b>	IEC60068-2-6